



INDIRECT FIRED SPACE HEATERS
DIESEL/FUEL OIL



MODELS
IDH500QR
IDH350QR

Installation - Operation/Maintenance
Instructions and Parts List

READ INSTRUCTIONS PRIOR TO STARTING HEATERS

FROST FIGHTER INC.
125 FURNITURE PARK
WINNIPEG, MANITOBA
CANADA R2G 1B9
TEL: (204) 775-8252
FAX: (204) 783-6794



WWW.FROST-FIGHTER.COM
TOLL FREE 1-888-792-0374

Rev. 1.5.0
MAY 2024

IMPORTANT INSTRUCTIONS

1. READ ALL INSTRUCTIONS BEFORE INSTALLING OR USING THIS HEATER.
2. This heater is hot when in use. To avoid burns do not touch hot surfaces. Keep combustible materials such as furniture, papers, clothes, curtains, tarps, plastic sheets, combustible building materials & partitions, other equipment, etc. at least 10 feet (3 m) from the front of the heater and keep them away from the sides and rear.
3. Do not operate any heater after it malfunctions. Disconnect power at the service panel and have it inspected by a qualified electrician before reusing.
4. To disconnect heater, turn controls to off and disconnect power supply cord from power source.
5. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause overheating, fire or damage to the heater.
6. To prevent a possible fire, do not block air intake or exhaust in any manner.
7. Do not use it in areas where gasoline, paint, or flammable vapors or liquids are used or stored.
8. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
9. This heater may include a visible or audible alarm to warn that parts of the heater are getting excessively hot. If the alarm illuminates (or sounds), immediately turn the heater off and inspect for any objects on or adjacent to the heater that may have blocked the airflow or otherwise caused high temperatures to have occurred. Do not operate with the alarm illuminating (or sounding)

SAVE THESE INSTRUCTIONS

TABLE OF CONTENTS

IDH500QR/IDH350QR

PAGE 1-3	SAFETY INFORMATION AND SAFETY INSTRUCTIONS
PAGE 4	SPECIFICATIONS
PAGE 5	DIMENSION OF IDHQR SERIES OF HEATERS
PAGE 6	INSTALLATION INSTRUCTIONS, CLEARANCES
PAGE 7	CLEANING PROCEDURE, COMBUSTION AIR ADJUSTMENTS
PAGE 8	OPERATING INSTRUCTIONS
PAGE 9	IDH MAINTENANCE INSTRUCTIONS
PAGE 10	LIMITS, FAN SWITCHES AND TEMPERATURE FEELERS
PAGE 11	FAN TEMPERATURE FEELER ADJUSTMENTS
PAGE 12	IDH350-IIQR& IDH500QR BURNER COMPONENTS
PAGE 13-14	ACCESSING BURNER NOZZLE AND ELECTRODES
PAGE 15	IDH350-IIQR & IDH500QR CF BURNER ELECTRODE ASSEMBLY
PAGE 16	SETTING OF THE ELECTRODES AND “Z” DIMENSION
PAGE 17	FUEL PUMP & FILTER
PAGE 18	FUEL LINE CONNECTIONS & PRECAUTIONS
PAGE 19-20	IDH TROUBLESHOOTING GUIDE
PAGE 21	SEQUENCE OF OPERATION FOR GEISYS CONTROLLER
PAGE 22-23	IDH350QR & IDH500QR WIRING DIAGRAM POWER METER,
PAGE 24	DISPLAY SCREEN, AND SELECTOR BUTTON
PAGE 25-26	IDH350QR& IDH500QR COMPONENTS
PAGE 27-28	TIGERLOOP SYSTEM
PAGE 29	HEAT EXCHANGER FOR OIL UNITS
PAGE 30	IDH350QR & IDH500QR BACK VIEW
PAGE 31	FRONT OF IDH500QR & IDH350QR HEATERS
PAGE 32	FROSTFIGHER WARRANTY

SAFETY INFORMATION AND SAFETY INSTRUCTIONS

STANDARD WARNING SYMBOLS



DANGER

INDICATES EXTREME HAZARD
THAT COULD RESULT IN INJURY
OR DEATH



WARNING

INDICATES POSSIBLE HAZARD THAT
COULD DAMAGE EQUIPMENT OR
PROPERTY AND/OR RESULT IN
INJURY



CAUTION

INDICATES POSSIBLE HAZARD
THAT COULD CAUSE IMPROPER
OPERATION OR DAMAGE
EQUIPMENT

OTHER SPECIFIC HAZARD SYMBOLS

THESE SYMBOLS ARE USED THROUGHOUT THIS MANUAL TO INDICATE SPECIFIC HAZARDS



RISK OF FIRE OR EXPLOSION



RISK OF SHOCK OR ELECTROCUTION



HOT SURFACES – RISK OF BURNS



RISK OF ASPHYXIATION

INSTALLATION / OPERATION / MAINTENANCE INSTRUCTIONS

READ INSTRUCTIONS PRIOR TO OPERATING HEATER

GENERAL HAZARD WARNING

FAILURE TO COMPLY WITH PRECAUTIONS AND INSTRUCTIONS PROVIDED WITH THIS HEATER CAN RESULT IN DEATH, SERIOUS BODILY INJURY AND PROPERTY LOSS OR DAMAGE FROM HAZARDS OF FIRE, EXPLOSION, BURN ASPHYXIATION, CARBON MONOXIDE POISONING, AND/OR ELECTRICAL SHOCK.

ONLY PERSON(S) WHO CAN UNDERSTAND AND FOLLOW THE INSTRUCTIONS SHOULD USE OR SERVICE THIS HEATING UNIT.

IF YOU REQUIRE ASSISTANCE OR HEATER INFORMATION SUCH AS AN INSTRUCTION MANUAL, LABELS, ETC., CONTACT THE MANUFACTURER



DANGER



FIRE, BURN INHALATION, AND EXPLOSION HAZARD. KEEP SOLID COMBUSTIBLES, SUCH AS BUILDING MATERIAL, PAPER AND/OR CARDBOARD A SAFE DISTANCE AWAY FROM THE HEATER AS REQUIRED BY THE INSTRUCTIONS. NEVER USE THE HEATER IN SPACES WHICH MAY CONTAIN VOLATILE OR AIRBORNE COMBUSTIBLES, OR PRODUCTS SUCH AS GASOLINE, SOLVENTS, PAINT THINNER, ACETONE, DUST PARTICLES AND/OR UNKNOWN CHEMICALS. USE ONLY THE FUEL(S) SPECIFIED FOR THE HEATER.

DO NOT USE THIS HEATER IN A SPACE WHERE GASOLINE OR OTHER LIQUIDS HAVING FLAMMABLE VAPOURS ARE STORED OR USED.

THIS PRODUCT IS NOT INTENDED FOR HOME OR RECREATIONAL VEHICLE USE.



WARNING

INSTALLERS RESPONSIBILITY

THE INTENDED USE OF THIS HEATER IS FOR THE TEMPORARY HEATING OF BUILDINGS OR STRUCTURES AND THOSE UNDER CONSTRUCTION, ALTERATION OR REPAIR.

DO NOT INSTALL OR OPERATE THIS HEATER IN A SPACE WHERE GASOLINE OR OTHER LIQUIDS HAVING FLAMMABLE VAPOURS ARE STORED OR USED.

ALL INSTALLATIONS MUST MEET CURRENT NATIONAL CODES AND THOSE OF THE LOCAL JURISDICTIONS.

OIL FIRED INSTALLATIONS – C.S.A. STANDARD B139 or NFPA 54

GAS FIRED INSTALLATIONS – STANDARD: ANSI Z83.7 – CSA 2.14

GAS INSPECTION AUTHORITIES REQUIRE THAT THE INSTALLATION AND MAINTENANCE OF HEATER AND ACCESSORIES SHALL BE ACCOMPLISHED BY A QUALIFIED GAS FITTER.

OPERATORS RESPONSIBILITY

Installation and adjustment of the burner requires technical knowledge and the use of combustion test instruments. **Do not** tamper with the unit or any safety controls. Call your qualified service technician. Incorrect operation of the burner could result in severe personal injury, death, or substantial property damage.

Have your equipment inspected and adjusted annually by your qualified service technician to assure continued proper operation.

Never store gasoline or other combustible materials near the heating equipment. This could result in a fire, or explosion with the risk of severe personal injury, death or property damage.

Do not permit person(s) unfamiliar with the equipment to operate the heater.

Use only the correct fuel intended for the heater and as stipulated in the manual. Using the wrong fuel(s) can result in fire, explosion, injury, and damage to equipment and property.

SPECIFICATIONS

MODEL	IDH350QR	IDH500QR
MAXIMUM INPUT	350,000 BTU/HR	420,000-500,000 BTU/HR
NOZZLE SIZE	1.75 - 2.00 USGPH 45° B (SOLID)	2.25 - 3.00 USGPH 60° B (SOLID)
PUMP PRESSURE	125 P.S.I.	140 P.S.I.
FUEL TANK CAP.	35 IMP GALS. 42 US GALS.	35 IMP GALS. 42 US GALS.
ELECTRICAL SUPPLY	115 VOLT 15 AMP	115 VOLT 20 AMP
HEATED AIR (w/o DUCT)	4800 CFM	4800 CFM
APROX. RUN TIME	13 HOURS	11 HOURS
APPROVAL AGENCY		
DRY WEIGHT	510 LBS.	510 LBS.

PLEASE REFER TO PAGE 7 IF KEROSENE IS NOT BEING USED.

Flue size 6" on all units

NOTE: -These heaters are intended for use primarily as temporary heating of buildings under construction, alteration or repair

MAXIMUM ALLOWABLE DUCT LENGTHS

IDH350QR
(350,000 BTU/HR)

100 feet 16" outlet ducting without inlet ducting
75 feet 16" outlet ducting w/ 25 feet 16" inlet ducting
50 feet 16" outlet ducting w/ 50 feet 16" inlet ducting


IDH500QR
(420,000 - 500,000 BTU/HR)

OR


100 feet 2 x 12" outlet ducting w/ 0 feet 16" inlet ducting
75 feet 2 x 12" outlet ducting w/ 25 feet 16" inlet ducting
50 feet 2 x 12" outlet ducting w/ 50 feet 16" inlet ducting

100 feet 16" outlet ducting w/ 0 feet 16" inlet ducting
50 feet 2 x 12" outlet ducting w/ 0 feet 16" inlet ducting

Dimensions of IDHQR series of heaters

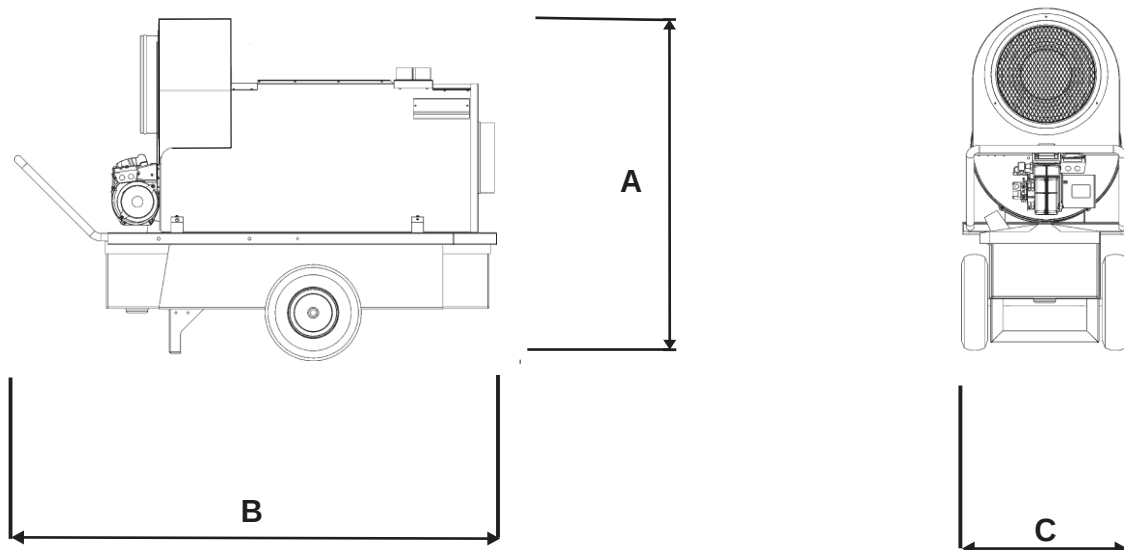

Heater Only					With Packaging			
MODEL	A	B	C	WEIGHT (LBS)	L	W	H	WEIGHT (LBS)
IDH350	51"	76 1/2"	27"	510	83"	38"	52 1/2"	562
IDH500	51"	76 1/2"	27"	510	83"	38"	52 1/2"	562

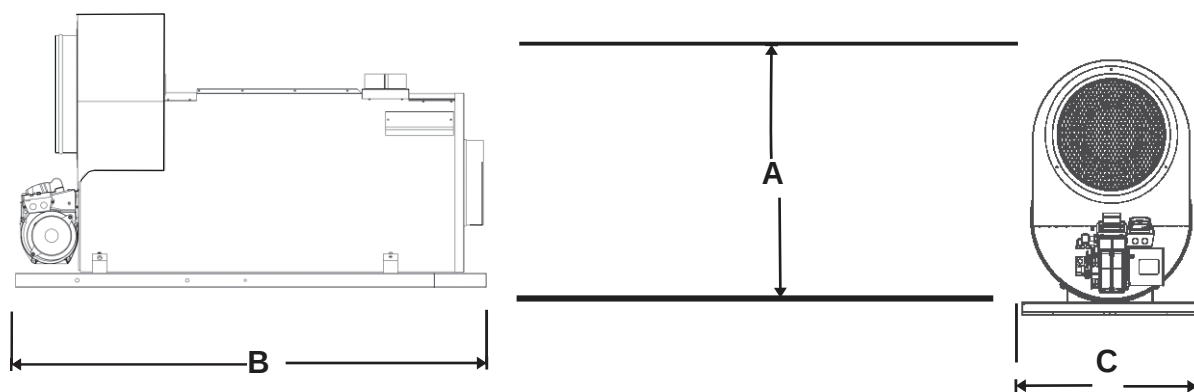

Heater Only					With Packaging			
MODEL	A	B	C	WEIGHT (LBS)	L	W	H	WEIGHT (LBS)
IDH350	29 1/2"	65 1/2"	25"	325	70 1/2"	32"	35 1/4"	375
IDH500	29 1/2"	65 1/2"	25"	325	70 1/2"	32"	35 1/4"	375

INSTALLATION INSTRUCTIONS

1. The recommendations of local authorities having jurisdiction must be followed. For recommended Installation practices refer to C.S.A. Standard B139 (CANADA) or NFPA 54 (US)
2. When firing the unit in an enclosed area 3 square feet must be provided to allow the free entry of the air required for operation.
3. For electrical supply, use 3 wire receptacle with "U" ground.
4. Do not operate the unit in partly ventilated areas without a flue pipe or in close proximity to combustible surfaces or materials.

INSTALLATION CLEARANCES

NOTE: Installation clearances are as follows:


Top - 3 inches
Sides - 24 inches
Burner End - 4 feet

Discharge End - 10 feet Vent
Flue/Venting - 24 inches
Floor - Combustible

FLUE PIPE CONNECTIONS

The heater can be used indoors when properly vented to the outdoors.

When the heater is connected to a flue pipe the flue pipe shall terminate in a vertical section at least two feet long. Horizontal runs should have rise ratio of 1 in 10 away from the heater. The chimney should have .02" W.C. draft to ensure safe operation of the unit. Where down drafts are liable to occur a vent cap should be used. All venting should correspond with the CSA B149 (CANADA), NFPA 54 (US) standard and/or allocal codes.

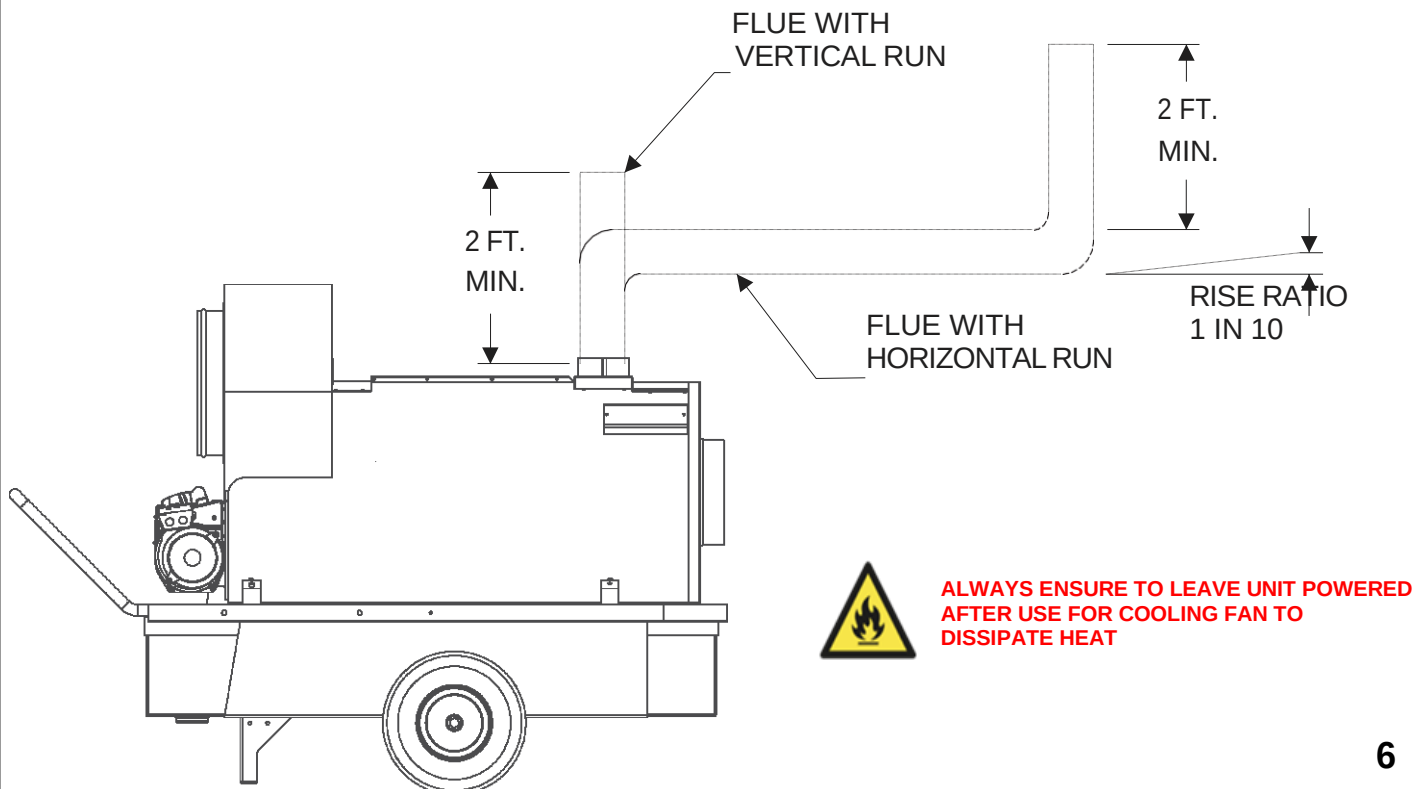

HEAT EXCHANGER CLEANING

1. Remove front cap. (48205 or 48205A)
2. Remove outer and inner cover panel (jacket to front). (48119A & 48119B)
3. Remove the fan intake screen and reach inside fan housing to loosen clamp and gasket on burner tube where it inserts into the heat exchanger. It is recommended that a new gasket be used when re-installing.
4. Remove fan switch/high limit cover on outer jacket at the discharge end of the heater. Loosen fan switch 48111B and remove it & feeler from the jacket. Remove the 48110A limit switch and feeler from the jacket.
5. Slide heat exchanger out of the jacket and place on the floor.
6. Use a pressure washer to nozzle through the burner opening to clean the inner chamber and use a pressure washer nozzle through the flue to clean the outer chamber.
7. If heat exchanger is extremely dirty or plugged, disassembly of the heat exchanger may be required. Contact your distributor or Frost Fighter for further information regarding this procedure.

COMBUSTION AIR ADJUSTMENTS

****For proper combustion air adjustment, a calibrated gas analyzer and smoke tester should be used to ensure complete combustion. Air adjustment should be made at the correct input and be adjusted to achieve 10% CO₂. For optimum combustion efficiency the combustion air control should be set to provide no more than a No. 1 smoke (Bacharach Scale). The Beckett burner has a calibrated air band, which will assist in adjusting the primary air for a good oil/air mixture. Adjust air band supply by loosening lock screws and moving air shutter (B48254) and if necessary, the bulk air band. Begin by reducing the air until the unit begins to produce smoke. Increase air until no smoke is produced. Check for excessive heat buildup in the heat exchanger. Insufficient air will cause flame impingement and reduced heat exchanger life. Increase air until heat buildup has been eliminated. Check for proper ignition. Once satisfied, re-tighten all screws and locking mechanisms.

This adjustment is to be carried out while the unit is operating and after 5 minutes of firing. Rotating the air shutter on the burner housing makes the adjustment.

RECOMMENDED AIR SETTINGS					
	ABOVE 5°F (-15°C)		BELOW 5°F (-15°C)		
UNIT MODEL	SHUTTER	BAND	SHUTTER	BAND	BURNER MODEL
IDH350QR	10	6	8	6	CF 375
IDH350-IIQR	4	0	3	0	CF 500
IDH500QR	10	0	8	0	CF 800

SEE PAGE 9 FOR AIR SHUTTER AND AIR BAND DESCRIPTION AND LOCATION

Note: The above settings are based upon clean and properly adjusted equipment in proper working order, correct fuel pressures and at altitudes below 2000 feet ASL.

Combustion air adjustments can vary with location, altitude and type of fuel used. Less air may be required in extreme cold conditions. More air / less fuel may be required for increased altitudes.

Burner input must be de-rated by 4% per every 1000 ft. (300 m.) ASL when above 2000 ft. (600 m.)

Example operating at 5000 ft. (1500 m.) ASL, the burner input must be de-rated by $.04 \times 5 = .20 = 20\%$

Due to the increased density of #2 & #1 oil at colder temperatures, kerosene fuel must be used or the oil nozzle change as follows at temperatures below 8°F/-10°C. Frost Fighter heaters are factory shipped with these nozzles to ensure reliable operation in cold ambient conditions up to 2000 ft. (600 m.) above sea level.

Model
IDH350QR
IDH500QR

Nozzle (USGPH)
1.75 X 45°B Delevan
2.25 X 60°B Delevan

OPERATING INSTRUCTIONS

TO START HEAT WITH GENISYS CONTROL

1. Ensure unit is on flat, level ground before starting, canopy and fan guards must be in place.
2. Ensure the switch is in the "OFF" position.
3. Check fuel level (4 gallons to start).
4. Plug in supply cord to 115 VAC outlet with sufficient capacity rating. (20A for IDH500QR).
5. Flip the switch to "MANUAL" position or "THERMOSTAT" position for use with a thermostat connected.
6. There will be a 3-5 second delay for the control self-check and then a 45 second "pre-purge" delay after the burner motor begins to run and the fuel will also be pumping fuel back to the return line

IF HEATER FAILS TO START

1. Press manual reset button on burner relay.
2. Check for low voltage condition and 115-volt supply.
3. Check fuel filter, suction tubing, and nozzle assembly. The fuel should appear in the clear line with a minimal amount of bubbles or air.

NOTE: If unit has been reset a number of times without ignition there will be an accumulation of oil in the combustion chamber! Do the Following:

1. Make sure unit is sitting on level ground to ensure excess oil drain out of secondary exchanger (via small drain hole located on outer shell of heat exchanger by burner end).
2. Allow unit to drain for 15-20 minutes or until all oil has drained out.
3. Upon ignition excessive amounts of smoke will be present until all excess oil has been burnt from the heat exchanger.
4. When the unit has stabilized and the burner set up to operate properly, shut off the switch. Let the fan cool down the chamber and stop.

IF UNIT STILL DOES NOT START REFER TO THE TROUBLE SHOOTING GUIDE PAGE 19-20

CAUTION

1. Do not start heater when excess oil has accumulated in chamber.
2. Do not fill tank while unit is operating.
3. Do not shut off by disconnecting supply cord. The heat exchanger should be properly cooled before power shutdown.
4. In no case should extension cords be smaller than 12 A.W.G. If cord is longer than 50' use 10 A.W.G. minimum.
5. Do not use gasoline, crankcase oil or heavier than No. 2 furnace oil.
6. Always maintain adequate fuel supply.

ELECTRICAL REQUIREMENTS:

15-amp circuit IDH350QR
20-amp circuit IDH350-IIQR
20-amp circuit IDH500QR

TO STOP HEATER

Flip switch to "OFF" position. The burner motor will continue to run for 2 minutes to help cool the heat exchanger and electrodes. The supply fan will continue to operate until the heat exchanger has sufficiently cooled. Do not disconnect main power until supply fan has stopped running.



CAUTION

BEFORE MOVING ANY GUARDS OR SAFETIES DISCONNECT THE MAIN POWER AS THE SUPPLY FAN WILL CYCLE AUTOMATICALLY.

IDH MAINTENANCE INSTRUCTIONS



WARNING

Heaters should be fully serviced annually to ensure proper performance. Maintenance should be performed by trained personnel only. Incorrect maintenance may result in improper operation and serious injury.

HIGH LIMIT SWITCH

It is recommended that the limit switch be checked every heating season to ensure the burner will shut down if temperature exceeds 220° F. This can be done by restricting the air flow through the unit. After tests are complete, remove the restrictions.

FAN SWITCH

The fan switch has been selected to allow for preheating of the heat exchanger to ensure that only heated air is allowed to enter the space. Upon satisfying the need for heat, the fan switch will continue to run the supply fan until the heat exchanger has cooled sufficiently. This feature will help prolong the life of your heat exchanger.

FUEL FILTER

Replace cartridge (48164 or 48164A) once every week of normal usage or sooner, depending on fuel quality.

FLAME DETECTOR

To test the cad cell, start the burner and before the safety lock-out timing period ends, disconnect the cad cell wires from the F-F terminals on the control. Next, jumper the F-F terminals with a piece of wire. This will allow the burner to continue running so that you will be able to check the cad cell resistance during the run cycle. If you did not get the F-F terminals on the control jumpered before the burner locked out, wait 3-5 minutes before attempting this again. With the burner running, connect the ohmmeter across the cad cell leads. Your signal should be between 250-1200 ohms. If higher, please clean the cad cell eye or replace.

BURNER

The electrode spacing must be checked and adjusted, if necessary, after every nozzle change. Nozzle should be replaced annually or sooner if burner cannot be set up to operate properly. Nozzle size and type are marked on the rating plate.

ELECTRICAL

Ensure all conduit (BX) connectors are tight. Check inside connections in control box to ensure good connections. Check marrettes.

FAN Check for dust or dirt build up on blades. Check for tightness of the set screw. Run heater to check for excess vibration. If physical damage is seen or noticed, replace fan.

MOTORS

No lubrication is necessary since the bearings are the sealed type. Clean motor of existing dust or dirt.

FUEL SYSTEM

Periodically remove fuel tank drain plug and clean tank. Do not store unit containing furnace oil for long periods. **The quality of fuel oil will affect light off at low ambient temperatures, #1 fuel oil or kerosene are recommended for temperatures below -10° C/8°F.** (see page 10 for recommended settings if using #2 fuel oil in cold temperature)


FUEL PUMP

Check fuel pump pressure on a regular basis. This should be checked at the bleeder screw. **WITH THE CLEAN-CUT PUMP ADD 10 LBS TO THIS READING TO GET THE TRUE PRESSURE.** There is a pressure loss when fuel passes through solenoid valve. Example: IDH350 pressure should be read on the gauge at 135 PSI, reading at nozzle line will then be 125. Units with the Suntec A2YA7916, pressure reading can be checked at the gauge port. This will provide a true reading.


HEAT EXCHANGER

If a smoky condition continues even after adjusting the air band assembly, the heat exchanger may need to be cleaned.

LIMITS, FAN SWITCHES AND TEMPERATURE FEELERS

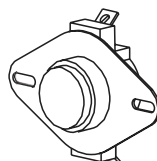

ADJUSTABLE FAN SWITCH 90°-130°F (48111B)
ALL MODELS

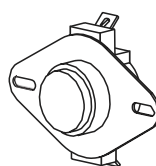

IDH HIGH LIMIT
C9648
L220 - 40F (48110A)
220°F




FAN FEELER
ALL MODELS
(48171)

Indoor and outdoor settings of fan switch

Indoors & if surrounding air is warm i.e. -5°C/23°F-Fan switch should be set to 115°F or higher so as to shut down unit when heat exchanger is properly cooled, also keeps fan motor from excessive running on when discharging cooler air.

Outdoor-Fan switch should be set between 90° - 100°F. The colder the temperature the lower the setting.

PLEASE NOTE THAT THERE IS A LONGER
TEMPERATURE FEELER ON THE AUTOMATIC HIGH
LIMIT. THIS SHOULD NOT BE ADJUSTED.

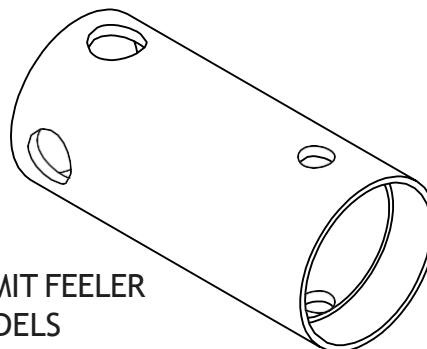

HIGH LIMIT FEELER
ALL MODELS
15030

FAN TEMPERATURE FEELER ADJUSTMENT

THE TEMPERATURE FEELER IS ATTACHED TO THE FAN SWITCH.

ALWAYS MAKE SURE THAT THE TEMPERATURE FEELER IS TOUCHING THE HEAT EXCHANGER!!


The temperature feeler provides air flow over the fan switch, which regulates the cycling of the fan. The temperature feeler can be adjusted for different outside temperatures, by rotating the location of the temperature feeler holes. This will provide optimum performance of the unit in different applications and will reduce or eliminate unnecessary fan cycling.

IF SURROUNDING AIR IS WARM (EG., -5°C or 23°F, indoor application):

TURN THE TEMPERATURE FEELER SO THAT THE HOLES ARE PARALLEL WITH THE HEAT EXCHANGER AND ENSURE THAT NOTHING IS BLOCKING THE AIR FLOW (EG., SCREWS).


BY DOING THIS THE FAN SWITCH WILL REMAIN COOL AND NOT OVERHEAT. (SEE FOLLOWING)

The fan switch is located under the high limit/fan cover which is mounted on the jacket close to front of unit. The switch can be adjusted by using a flat-headed screwdriver and turning it clockwise or counterclockwise to desired temperature.

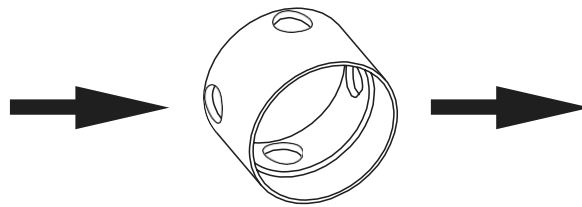

IF SURROUNDING AIR IS COLD (EG., Below -5°C or 23°F)

TURN THE TEMPERATURE FEELER SO THAT THE HOLES ARE CLOSED OFF AS THE AIR GOES OVER THE HEAT EXCHANGER, THIS WILL REDUCE FAN CYCLING, UNIT SHUTDOWN, ETC. (SEE FOLLOWING)

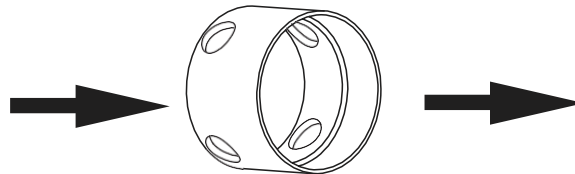


Indoor and outdoor settings of fan switch


Indoors & if surrounding air is warm i.e. -5°C/23°F-Fan switch should be set to 115° or higher so as to shut down unit when heat exchanger is properly cooled, also keeps fan motor from excessive running on when discharging cooler air.

Outdoor-Fan switch should be set between 90°-100°F. The colder the temperature the lower the setting. Very cold ambient conditions may require the fan switch to be set lower to prevent excessive fan cycling.

PLEASE NOTE THAT THERE MAY BE A LONGER TEMPERATURE FEELER ON THE AUTOMATIC HIGH LIMIT. THIS SHOULD NOT BE ADJUSTED.

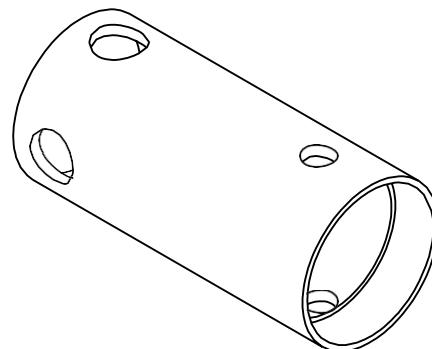

IDH350QR & IDH500QR BURNER COMPONENTS

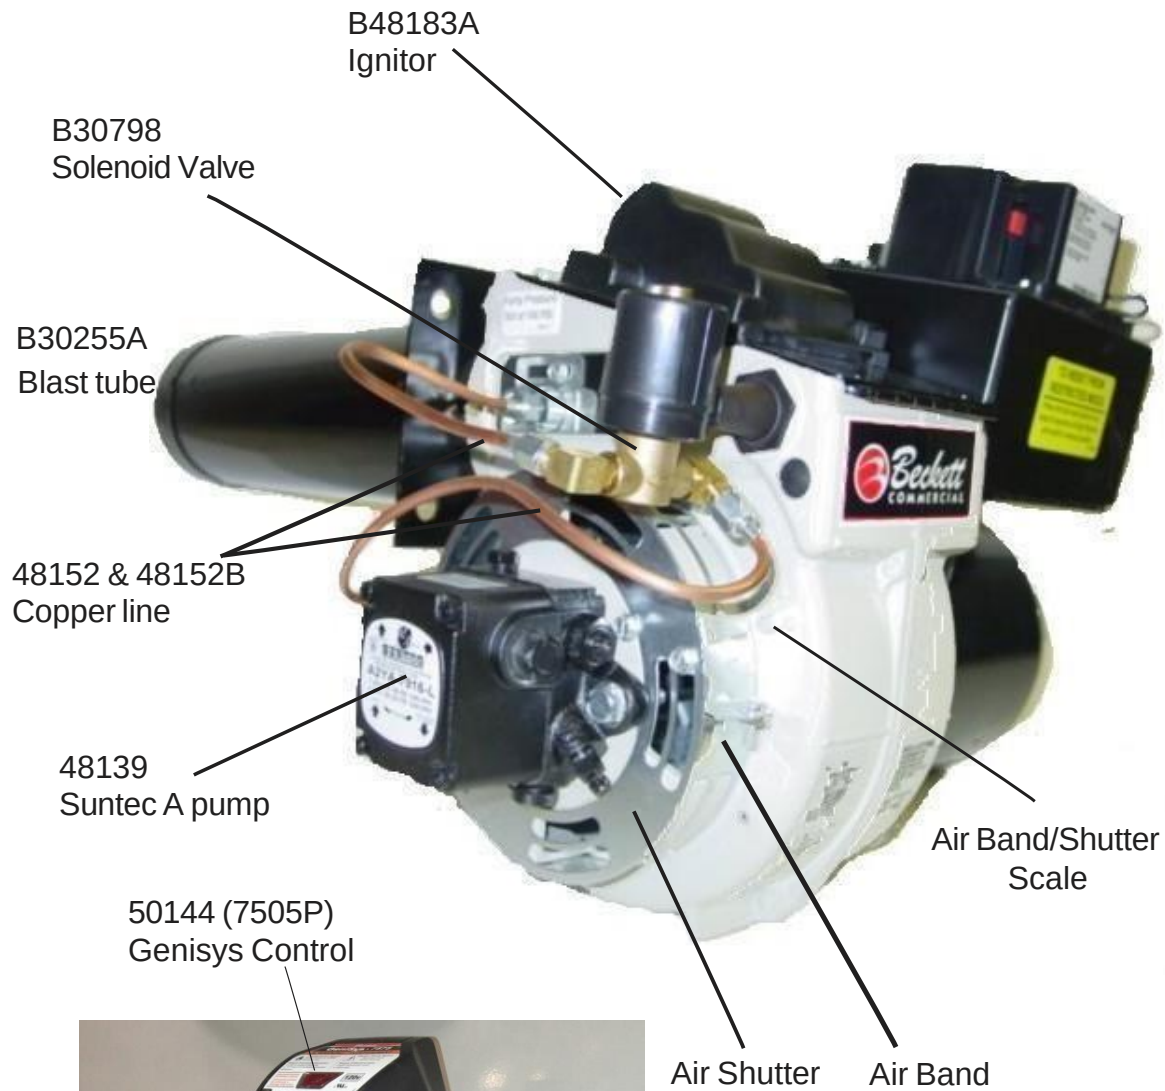

ACCESSING BURNER NOZZLE AND ELECTRODES

1



Remove fuel line connection from burner inlet.

2



Move copper fuel line tube away from burner

3



Removed splined nut from burner inlet connection.

4



Place splined nut in safe location such as on fuel line tube.

ACCESSING BURNER NOZZLE AND ELECTRODES

5




Remove ignitor retaining screws with 5/16" socket or wrench.

6



Swing open hinged ignitor plate.

7

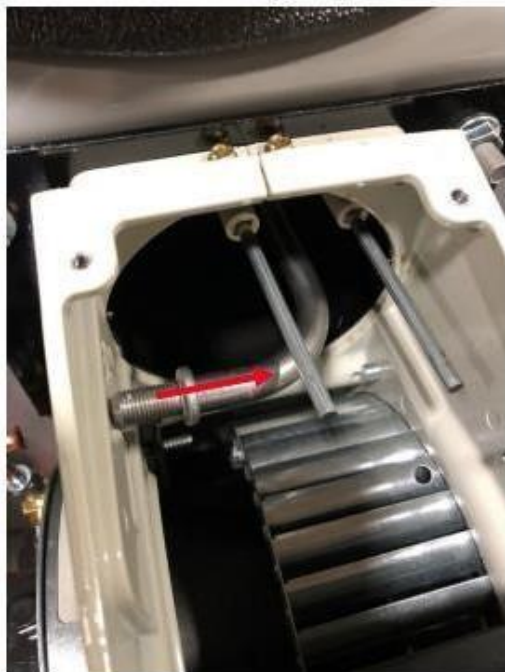

Move drawer assembly to the side in order to slide burner fuel pipe connection out of the housing.


8



Slide entire drawer assembly out of the burner to reveal the fuel nozzle and electrodes.

IDH350QR & IDH500QR CF BURNER ELECTRODE ASSEMBLY

(PART #B30268A)

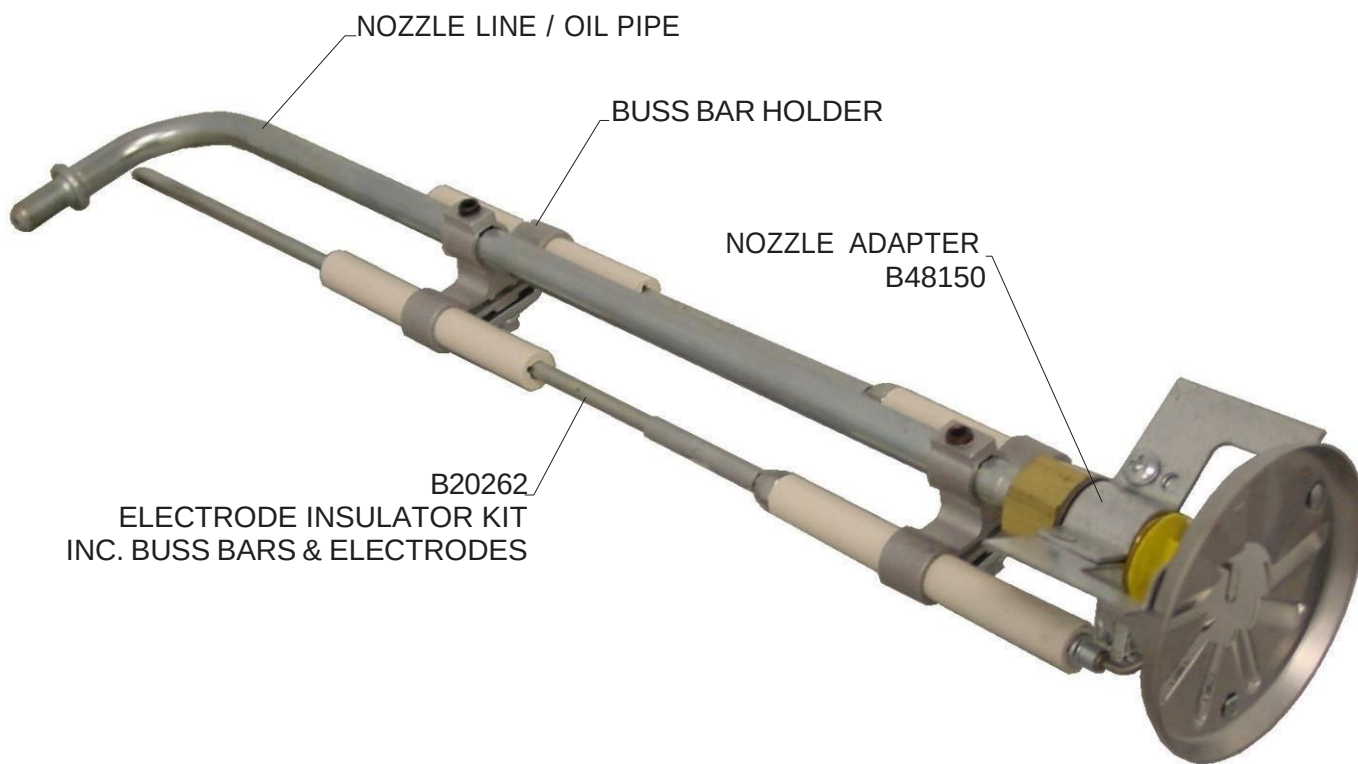

NOZZLE

For Correct Nozzle Size/Type see Page 1

See Page 4 for temperature/altitude considerations



Nozzle Flow, Type and Spray Angle are indicated on the nozzle sides.

ie. "2.25 60 B" indicates that the nozzle will supply 2.25 GPH @ 100 PSI & is a 60-degree spray angle type B (solid cone)

SETTING OF THE ELECTRODES AND "Z" DIMENSION

IDH350QR & IDH500QR

(CF800 and CF500 Burner)

(Adjust When Required or After Disassembly)



WARNING


Maintain Electrode Specifications

Failure to properly maintain these specifications could cause ignition malfunction, puff-back of hot gases, heavy smoke, asphyxiation, explosion and fire hazards.

Adjust the electrode gap and position in relation to the nozzle to the following specifications.

Check, and adjust, if necessary, the critical dimensions shown in **Figure 5**. Verify that the oil tube assembly and electrodes are in good condition, with no cracks or damage.

Figure 5 - Nozzle and nozzle line assembly

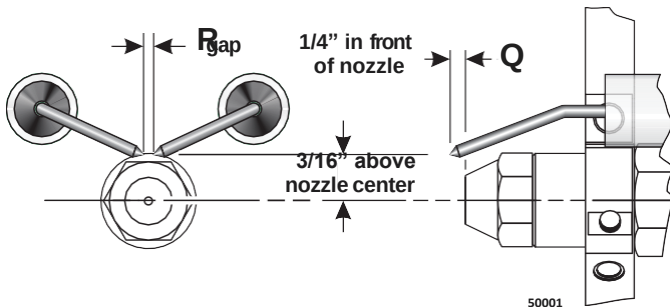

Legend (Figure 5)

- P Nozzle centerline to electrode tip = 3/16"
- Q Nozzle face to electrode tip = 1/4"
- R Electrode spacing = 1/8" - 3/16" gap

Install nozzle line assembly

Insert the nozzle line assembly (Drawer Assembly) into the burner air tube. Reference **Figure 6**.

Slide the secondary adjusting plate (**Figure 7**, item **f**) completely to the left on the indicator adjusting plate (item **e**). Finger tighten acorn nut (item **c**) to secure the two plates together. Slide both plates completely to the right (Indicator Plate will read 0). Tighten fastener (item **d**). Install the spline nut on the end of the nozzle line, leaving the nut loosely placed so the plates can be moved.

Figure 6 - Nozzle line assembly in burner

Z-Dimension

- CF800
1-3/4"
- CF500
1-9/16"
- CF500/800
(with CF140KZ Air Tube)
1-1/2"


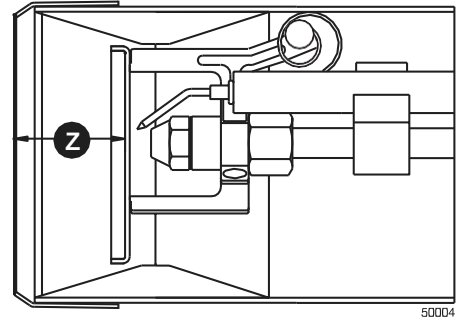


Figure 7 - Adjusting plate assy.

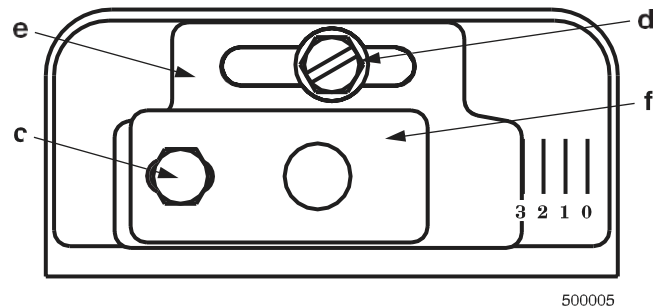

Legend (Figures 7)

- c Bottom acorn nut
- d Fastener
- e Indicator adjusting plate
- f Secondary adjusting plate

Set dimension Z

- Loosen fastener **c** in **Figure 7**. Slide the nozzle line and plate assembly until dimension **Z** in **Figure 6** is:

CF500 - 1-9/16" ±1/16"

CF800 - 1-3/4" ±1/16"

CF500/800 (with CF140KZ Air Tube) - 1-1/2" ±1/16"

- When dimension **Z** (from end of air tube to flat area of front face of head) is correctly set, tighten acorn nut (item **c**).
- Attach the oil line from the oil valve to the nozzle line end. Tighten securely.
- Before proceeding, check dimension **Z** once again. Loosen acorn nut **c** if necessary to reposition the nozzle line. Once dimension **Z** is set, **do not loosen the acorn nut (item) c again**. Note that for the setting of fastener **d**, refer to the initial head position procedure under "Start-up Checklist" section.



FUEL PUMP & FILTER

“A” PUMP (#48139) IDH500QR

CF800 & CF500 Burners

CLEAN CUT PUMP (B20139) IDH350QR

CF375 Burner

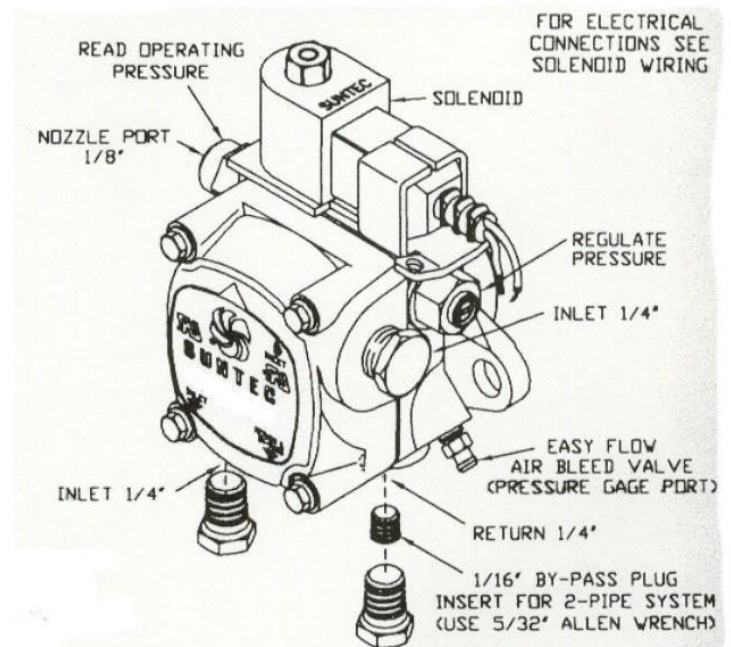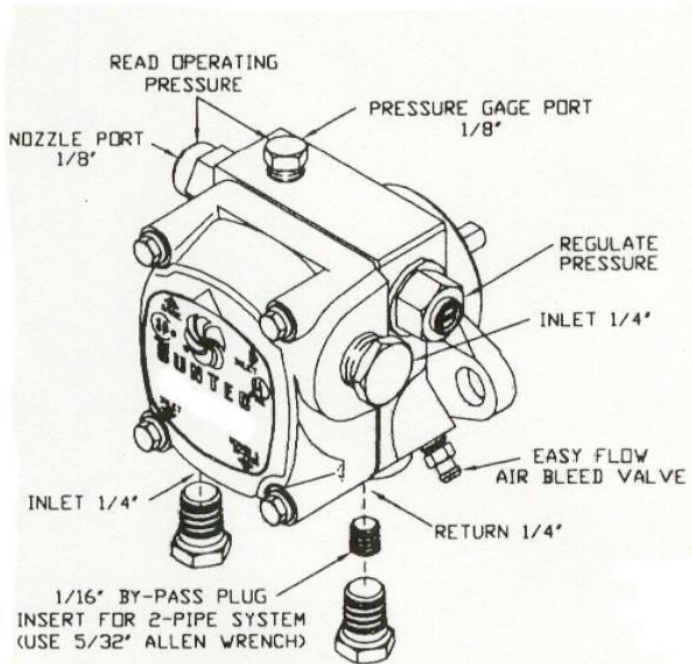

When replacing a fuel pump, ensure 1/16" by pass plug is installed in return port. Use 5/32" allen wrench

Pump fuel internal filter can be accessed if needed by removing 4 cover retaining bolts.

This filter would only need to be accessed if it is suspected that it may be restricted or clogged typically caused by the absence of proper primary filtering.

**TYPICAL PRIMARY FUEL FILTER
SUPPLIED ON ALL MODELS**



FUEL LINE CONNECTIONS & PRECAUTIONS

CONNECTING THE OIL SUPPLY/ RETURN LINES

Install the oil tank lines in accordance with all applicable codes.

Use continuous lengths of reinforced fuel rated hose routed away from and protected from traffic, where possible.

Install a high quality shut-off valve in an accessible location on the oil supply line. Locate one valve close to the tank.

WARNING

Install the oil lines using the following guidelines. Failure to comply could lead to equipment damage and present a risk of severe personal injury, death or substantial property damage due to leakage of oil and potential fire hazard.

Use only flare fittings at joints and connections. Never use compression fittings.

Install fittings only in accessible locations to ensure any leak will be detected.


Where joint sealing is needed, use only pipes dope. Never use Teflon tape. Tape strands can break free and damage the fuel unit.

On two-pipe oil systems verify that the suction line vacuum does not exceed the fuel manufacturer's recommendation.



Do not operate the burner unless a return line or a bypass loop is installed. Failure to follow this guideline and/or restricting or closing off the return line will cause damage to the fuel seals and consequent fuel leakage. This could result in severe personal injury, death or substantial property damage.

TWO-PIPE SYSTEM - (Bypass plug installed in pump)

TWO-STAGE TWO-PIPE MAXIMUM LINE LENGTH (H + R)

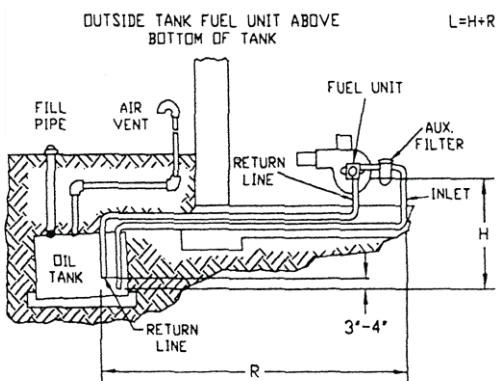

Lift "H"	3450 RPM Pump Speed 3/8" OD Tubing @ 7 GPM
0'	80'
2'	73'
4'	66'
6'	59'
8'	52'
10'	45'
12'	38'
14'	31'
16'	80'

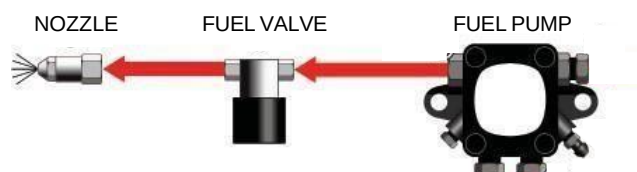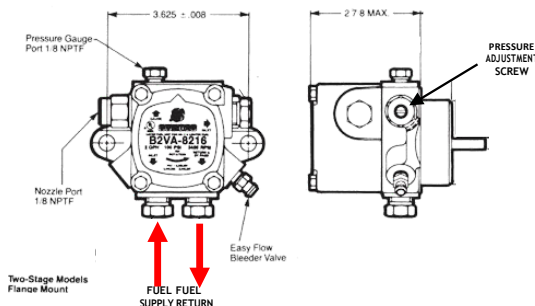

FUEL FLOW DIAGRAM

IDH TROUBLESHOOTING GUIDE

ALWAYS DOUBLE CHECK FOR SUFFICIENT POWER, GAUGE OF CORD (SEE TOP OF PAGE #8) AND PROPER FUEL SUPPLY. POWER AND FUEL SUPPLY MUST BE SHUT OFF/DISCONNECTED BEFORE REMOVING OR REPLACING ANY COMPONENTS ON THE HEATER.

1. Unit is turned on; nothing happens after 5 second safe start.

- a. Ensure proper voltage coming in, 115V AC.
- b. Check for power on both sides of burner fuse. If no power, then check toggle switch. If power on one side, replace fuse. If power on both sides, go to **c**.
- c. Check black wire from primary control. If no power there, remove high limit cover & check for power on both sides of high limit. If power on one side only, replace high limit. If power on both sides, go to **d**.
- d. Ensure thermostat contacts on primary control (T and T) have a jumper across them.
- e. Make sure light on primary control is not flashing. If so, push button to reset.
- f. Check manual reset button on motor and wiring connection to motor. If reset pushed and power is going to motor, but nothing is happening, the burner motor may need replacement.
- g. On neutral line (white wires) make sure all connections are tight and secure, and unit is properly grounded. With AC voltage tester check that there is proper power supplied to the unit.
- h. If power coming into black wire on primary control, but no power out to orange wire, when the burner motor should be operating, replace primary control.
- i. If green (Flame) light on primary control stays on, check to ensure ignitor door is closed properly as cad cell is detecting light. If light stays on and no obvious areas are open, check OHM reading across two yellow wires. If you get a reading lower than 1 megohm, replace cad cell.

2. Burner motor starts but unit will not fire.

- a. Check for power on blue wire on primary control going to ignitor. If no power there, replace primary control if powered, go to **b**.
- b. Remove electrode assembly and check isolators for cracks or chips in the porcelain. Make sure electrode setting is proper. For electrode adjustments, please turn to page 9 Clean assembly if there is any excess soot or oil.
- c. The nozzle should be checked and ensure it is not clogged or blocked. Make sure nozzle is not loose and is the correct size and type.
- d. Ensure air shutters are properly set to factory specifications. See page 7.
- e. Check for power on violet line on primary control. After pre-purge, if no power sent to violet line, replace primary control. If power on violet line, remove copper fuel line at electrode assembly to ensure fuel is coming out. If no fuel there, replace solenoid valve.
- f. At the bleeder screw, check for proper out pump pressure (see maintenance section). If low or no pressure, go to **g**.
- g. Check oil filter, oil pick up tube and oil lines to ensure free flow and they are not clogged or dirty.
- h. Check electrical polarity and grounding.

3. Burner fires then locks out.

- a. Check oil pressure to ensure solenoid valve is opening. Check oil flow system, filter, pick up tubes and lines.
- b. The nozzle should be checked to ensure it is clean and emitting a good spray pattern, as this could affect the cad cell operation.
- c. Cad cell (flame detector) could be defective. Disconnect yellow cad cell wires from primary control. Start unit and when it fires, connect jumper across connections on primary control. If unit continues to run, then check cad cell alignment with burner, clean the face with a soft cloth and ensure no external light is affecting it.
- d. With an ohmmeter, check resistance across cad cell leads with machine running and primary control cad cell leads jumpered out. If resistance over 1200 OHMS, cad cell should be replaced. If unit locks out with jumper, replace primary control.

IDH TROUBLESHOOTING GUIDE CONTINUED

3. **If unit locks out three times in succession, it will go into restricted lock out Mode. To reset, hold down reset button for 30 seconds until "Pump Prime" indicator flashes. The unit will then resume in normal operating mode.**
 - e. After verifying primary control is not in lockout & light continues to flash, replace primary control.
 - f. Check polarity, ground & voltage must be between 108-132v AC.
 - g. Make sure high limit is functioning properly.
4. **Smoky fire**
 - a. Check nozzle, make sure is tight and not clogged.
 - b. Check combustion chamber for cracks or burnt out.
 - c. Check air band settings. (Air shutter and/or air band may be closed too much-restricting combustion air.
 - d. Check pump pressure.
 - e. Check slide plate to make sure it is in correct position. (See page 9 for settings) If necessary, open slightly.
 - f. Check recommended settings if using #2 fuel in cold ambient temperatures.
5. **Delayed ignition**
 - a. Check for proper electrode setting.
 - b. Check the isolators for cracks or a conducting coat of soot or oil. Cracks sometimes occur under the electrode bracket, causing a short circuit.
 - c. Check to see that the air shutter is not overly open-too much air will blow out flame.
 - d. Check to ensure pump pressure is properly set.
 - e. Change nozzle.
 - f. Check fuel filter, replace if necessary.
 - g. Ensure draft or wind is not blowing out flame-add 3' stack.
6. **Main fan will not come on, unit shuts down on high limit.**
 - a. Check temperature feeler, make sure it is in properly.
 - b. Jumper out fan switch to test motor. If you have voltage to motor and still does not start, replace motor. Check line voltage to ensure proper voltage. Also checks amp draw on motor. Motor may be running too hot and not run due to thermal overload being tripped.
 - c. Replace fan switch if you have power on one side after unit heating up it does not make.
 - d. Replace high limit as it may be tripping too soon and not giving fan switch time to engage.
 - e. Ensure fan switch temperature is correct for weather conditions (see page 10 & 11 for settings)
7. **Unit on, but cycles on high limit**
 - a. Check air flow, ensure both ducts are in place and clear of obstruction and straight.
 - b. Check pump pressure, unit could be over firing.
 - c. Check nozzle that proper size of nozzle is installed.
 - d. Change high limit.
 - e. See page 1 for maximum duct lengths. Excessively long lengths can trip the high limit
 - f. Fuel type- #2 will increase BTU output @cold ambient temperatures resulting in overheating.
8. **Combustion chamber turns red.**
 - a. Nozzle may be firing sideways (replace or adjust)
 - b. Clogged nozzle (replace)
 - c. Temperature feeler not on properly or missing (Must be touching heat exchanger)
 - d. High limit not functioning (replace)
 - e. Excessive pump pressure. Check and reset if necessary.
 - f. Fuel type-see page 10 for recommended settings.

Sequence of Operation for Genisys Controller



Burner States

Standby:

The burner is idle, waiting for a call for heat.

Valve-On Delay:

The igniter and motor are on while the control delays turning on the oil solenoid valve for 45 seconds.

Trial For Ignition:

The oil solenoid valve is energized. A flame should be established within the factory set trial for ignition time ("lockout time").

Lockout:

The control has shut down for one of the following safety reasons:
a. The trial for ignition (lockout) time expired without flame being established.

b. The cad cell detected flame at the end of the Valve On Delay state. To reset the control from lockout, click the button 1-second.

NOTE:

A recurrence of the above failure modes or a failed welded relay check could cause the control to enter a Hard Lockout state that must be reset only by a qualified service technician. To reset from Hard Lockout, hold the reset button for 15 seconds until the yellow light turns on.

Ignition Carryover:

Once flame is established, the igniter remains on to ensure flame stability.

Run:

The flame is sustained until the call for heat is satisfied. The burner is then sent to Motor-Off Delay, if applicable, or it is shut down and sent to Standby.

Recycle:

If the flame is lost while the burner is firing, the control shuts down the burner, enters a 60 second recycle delay, and repeats the ignition sequence. The control will continue to Recycle each time the flame is lost, until it reaches a pre-set time allotment. The control will then go into Hard Lockout instead of recycle. This feature prevents excessive accumulation of oil in the appliance firing chamber.


Motor-Off Delay:

If applicable, the oil solenoid valve is turned off and the control delays turning the motor off for the set motor-off delay time before the control returns to standby.

Pump Prime:

The igniter and motor are on with the oil solenoid valve energized for 4 minutes. During Pump Prime mode, the cad cell is disregarded, allowing the technician to prime the pump without having to jumper the cad cell.

IDH 350QR & IDH500QR WIRING DIAGRAM

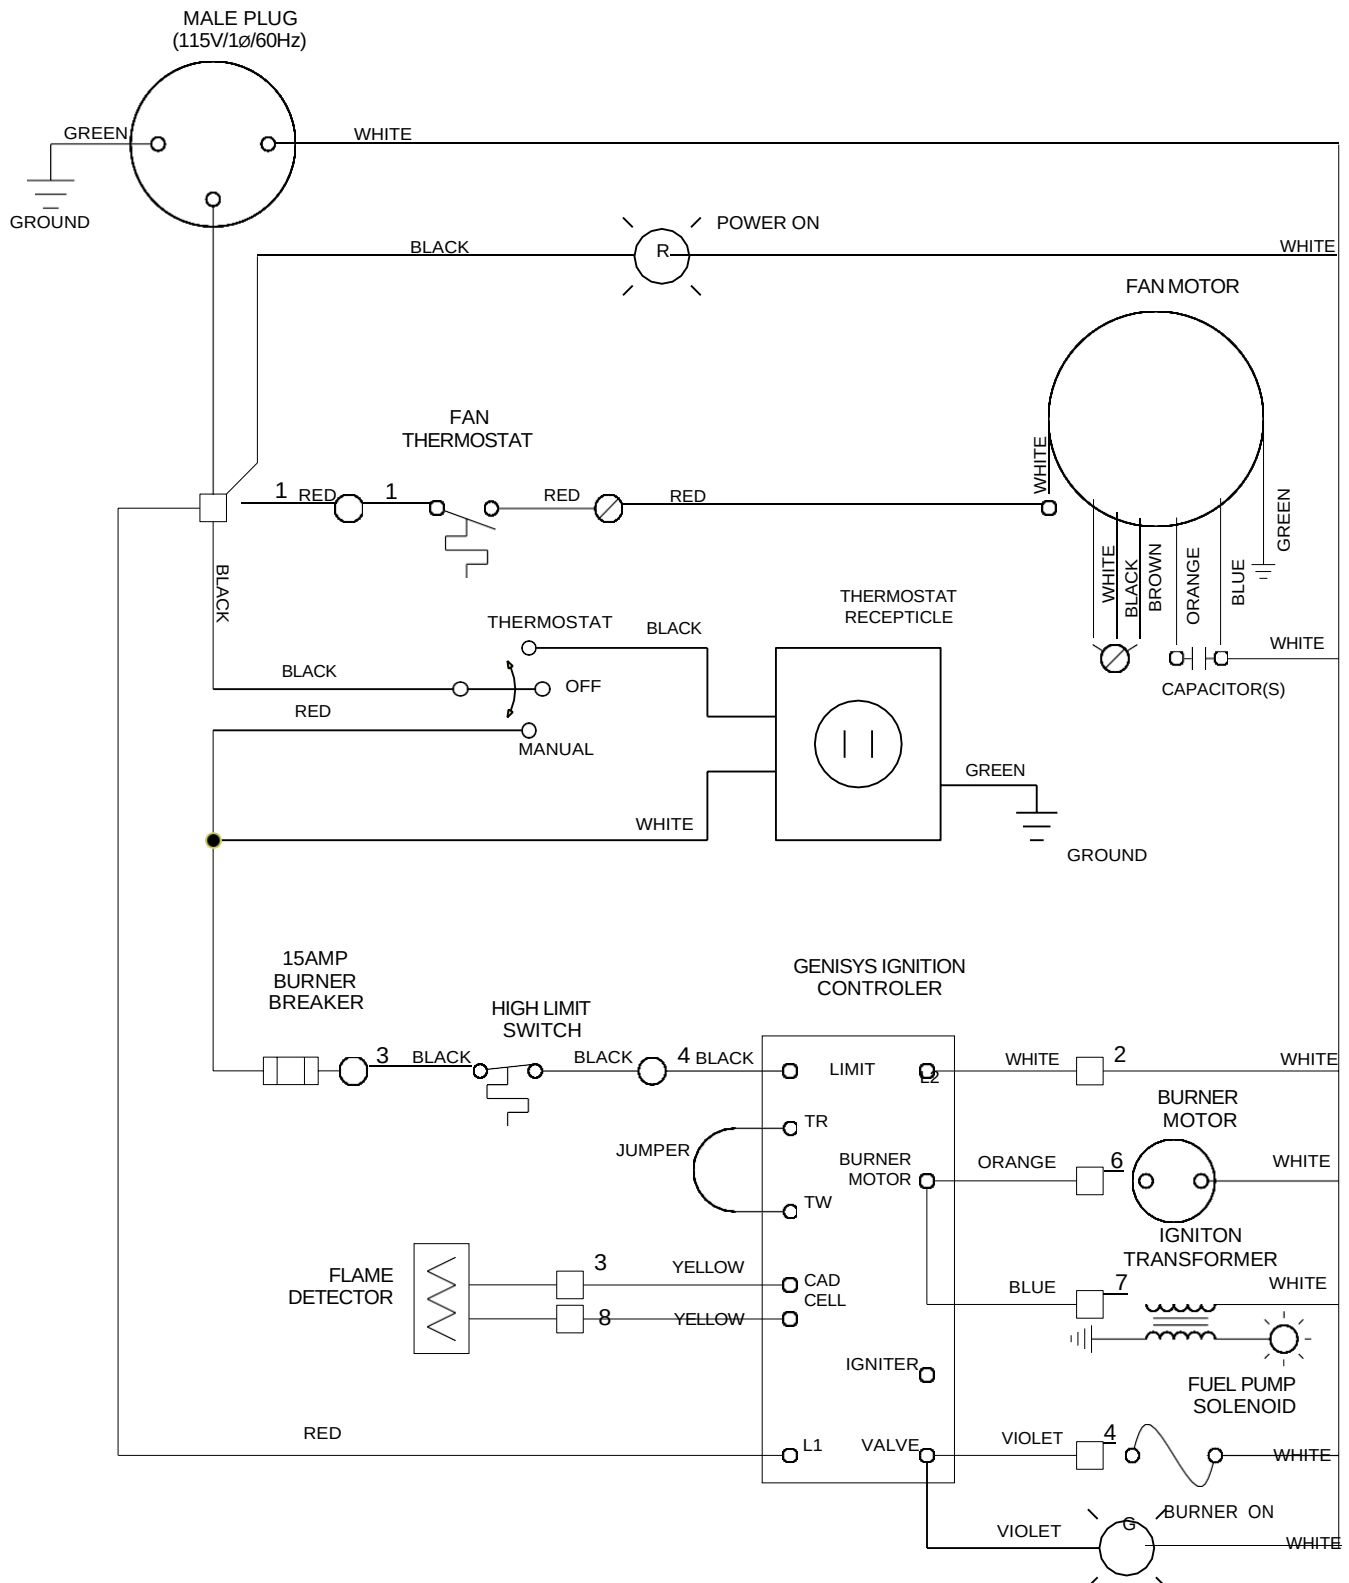


WIRING DIAGRAM

IDH350QRM / IDH500QRM

-OILFIRED-

(With Power Meter)

AUG. 2018

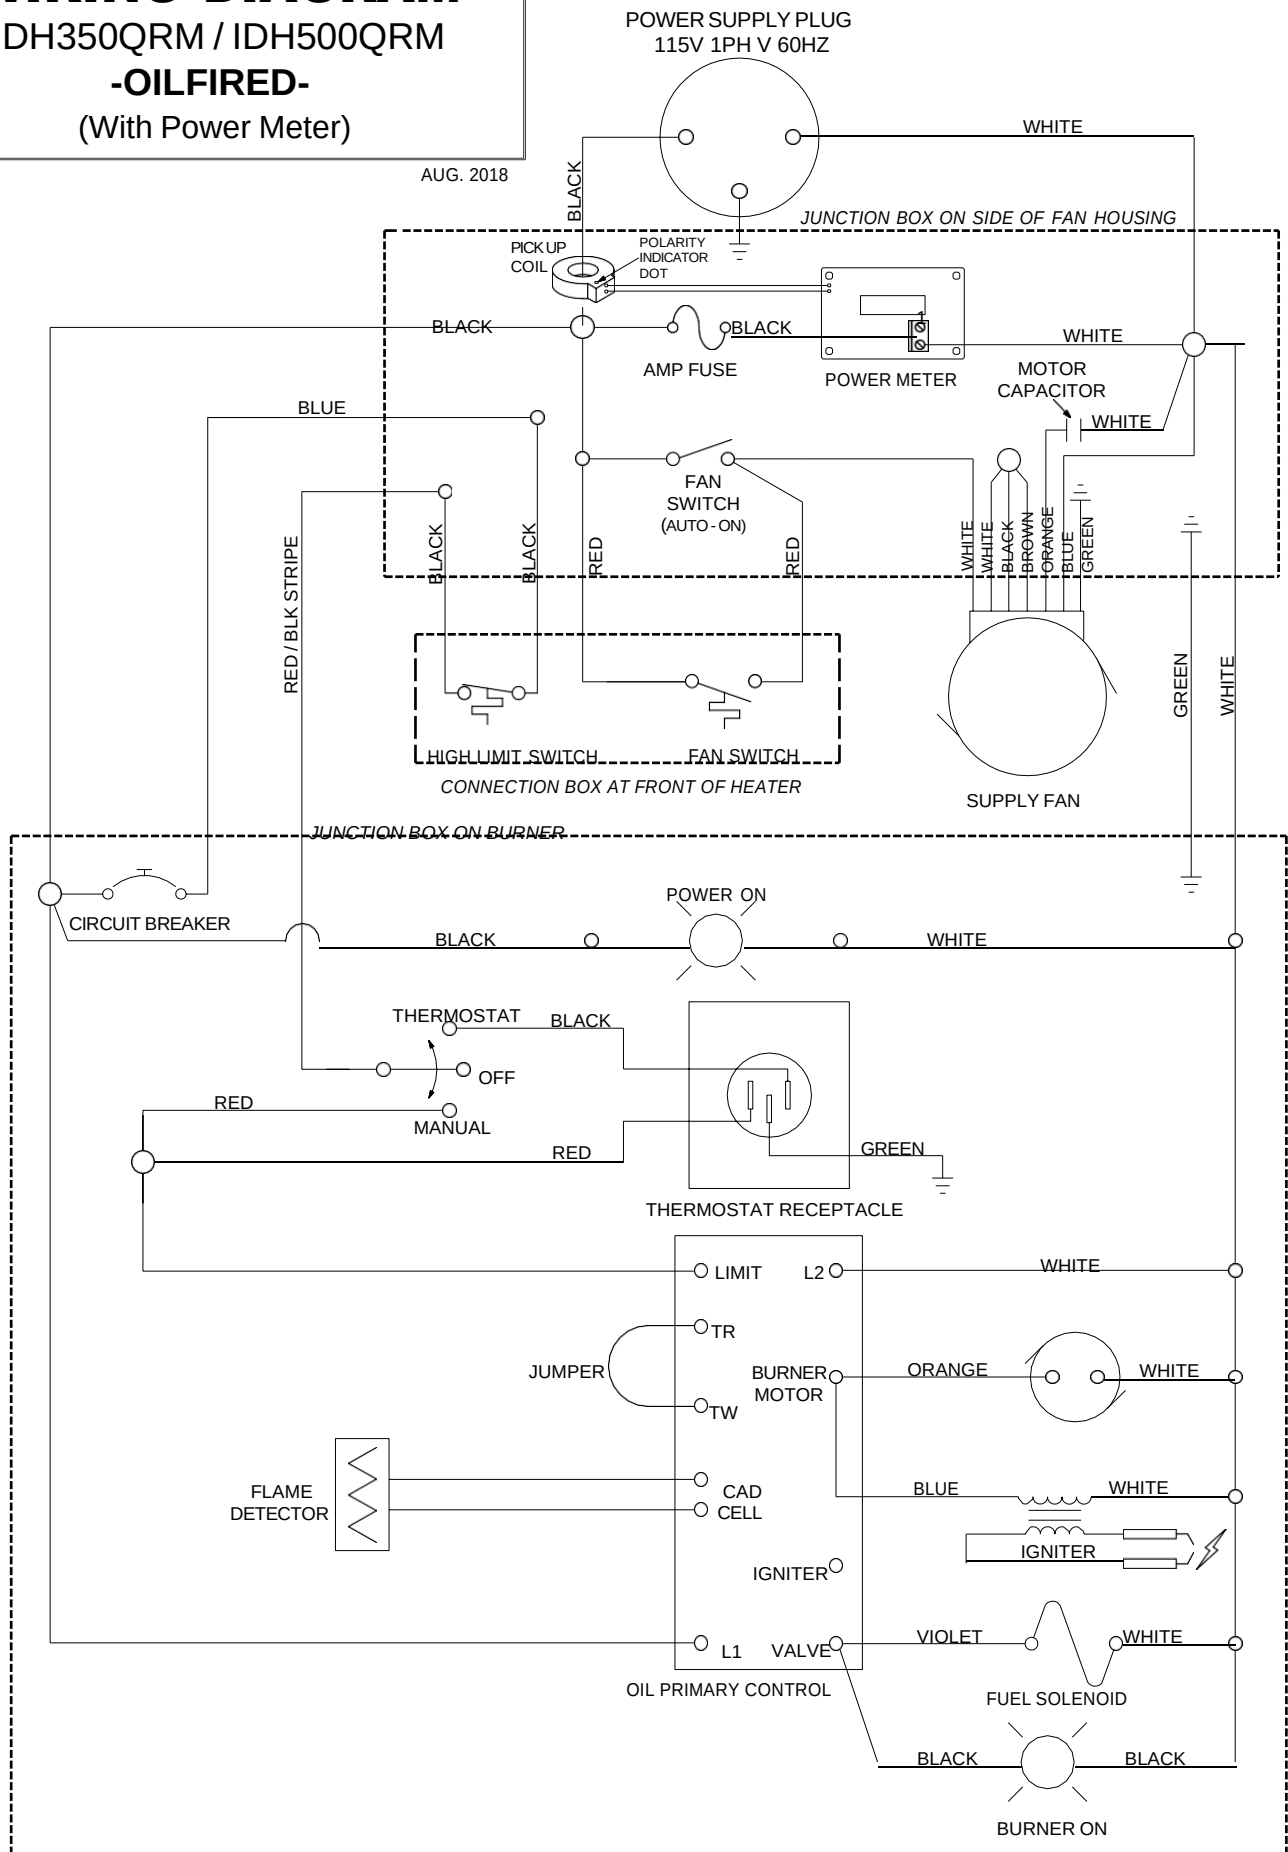

Frost Fighter IDH-QR Heaters after June 2018 may be equipped with optional power meter providing a real time display of critical information about the electrical power that is being supplied to the heater as well as heater's function and performance.


A bright 0.36"/9.2mm LED display is readable from up to 15 feet away which indicates the supply voltage, total amps, total watts or the line frequency by simply selecting which you wish to view. The display can also be set to continuously cycle through all four measurements.


Voltage measurement range is 85-264 VAC at 47-63HZ

Wattage is measured up to 9999 watts max.

Current is 0-32A with 0.01A resolution.

Display will accurately indicate real power and true rms current values of standard sine waves, triangle waves, square waves and other irregularly shaped waves with an accuracy of $\pm 1\%$ full scale.

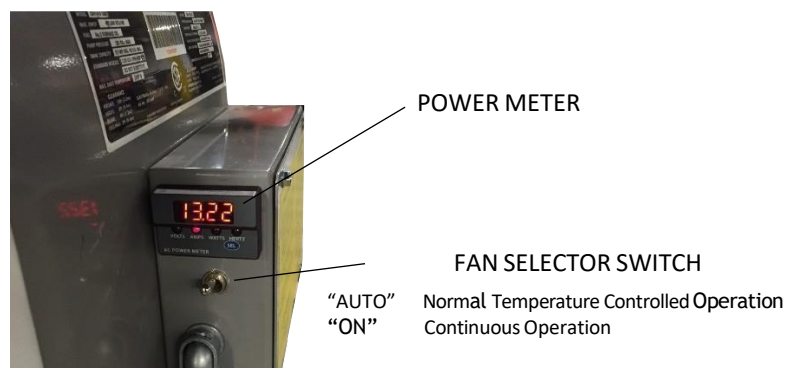


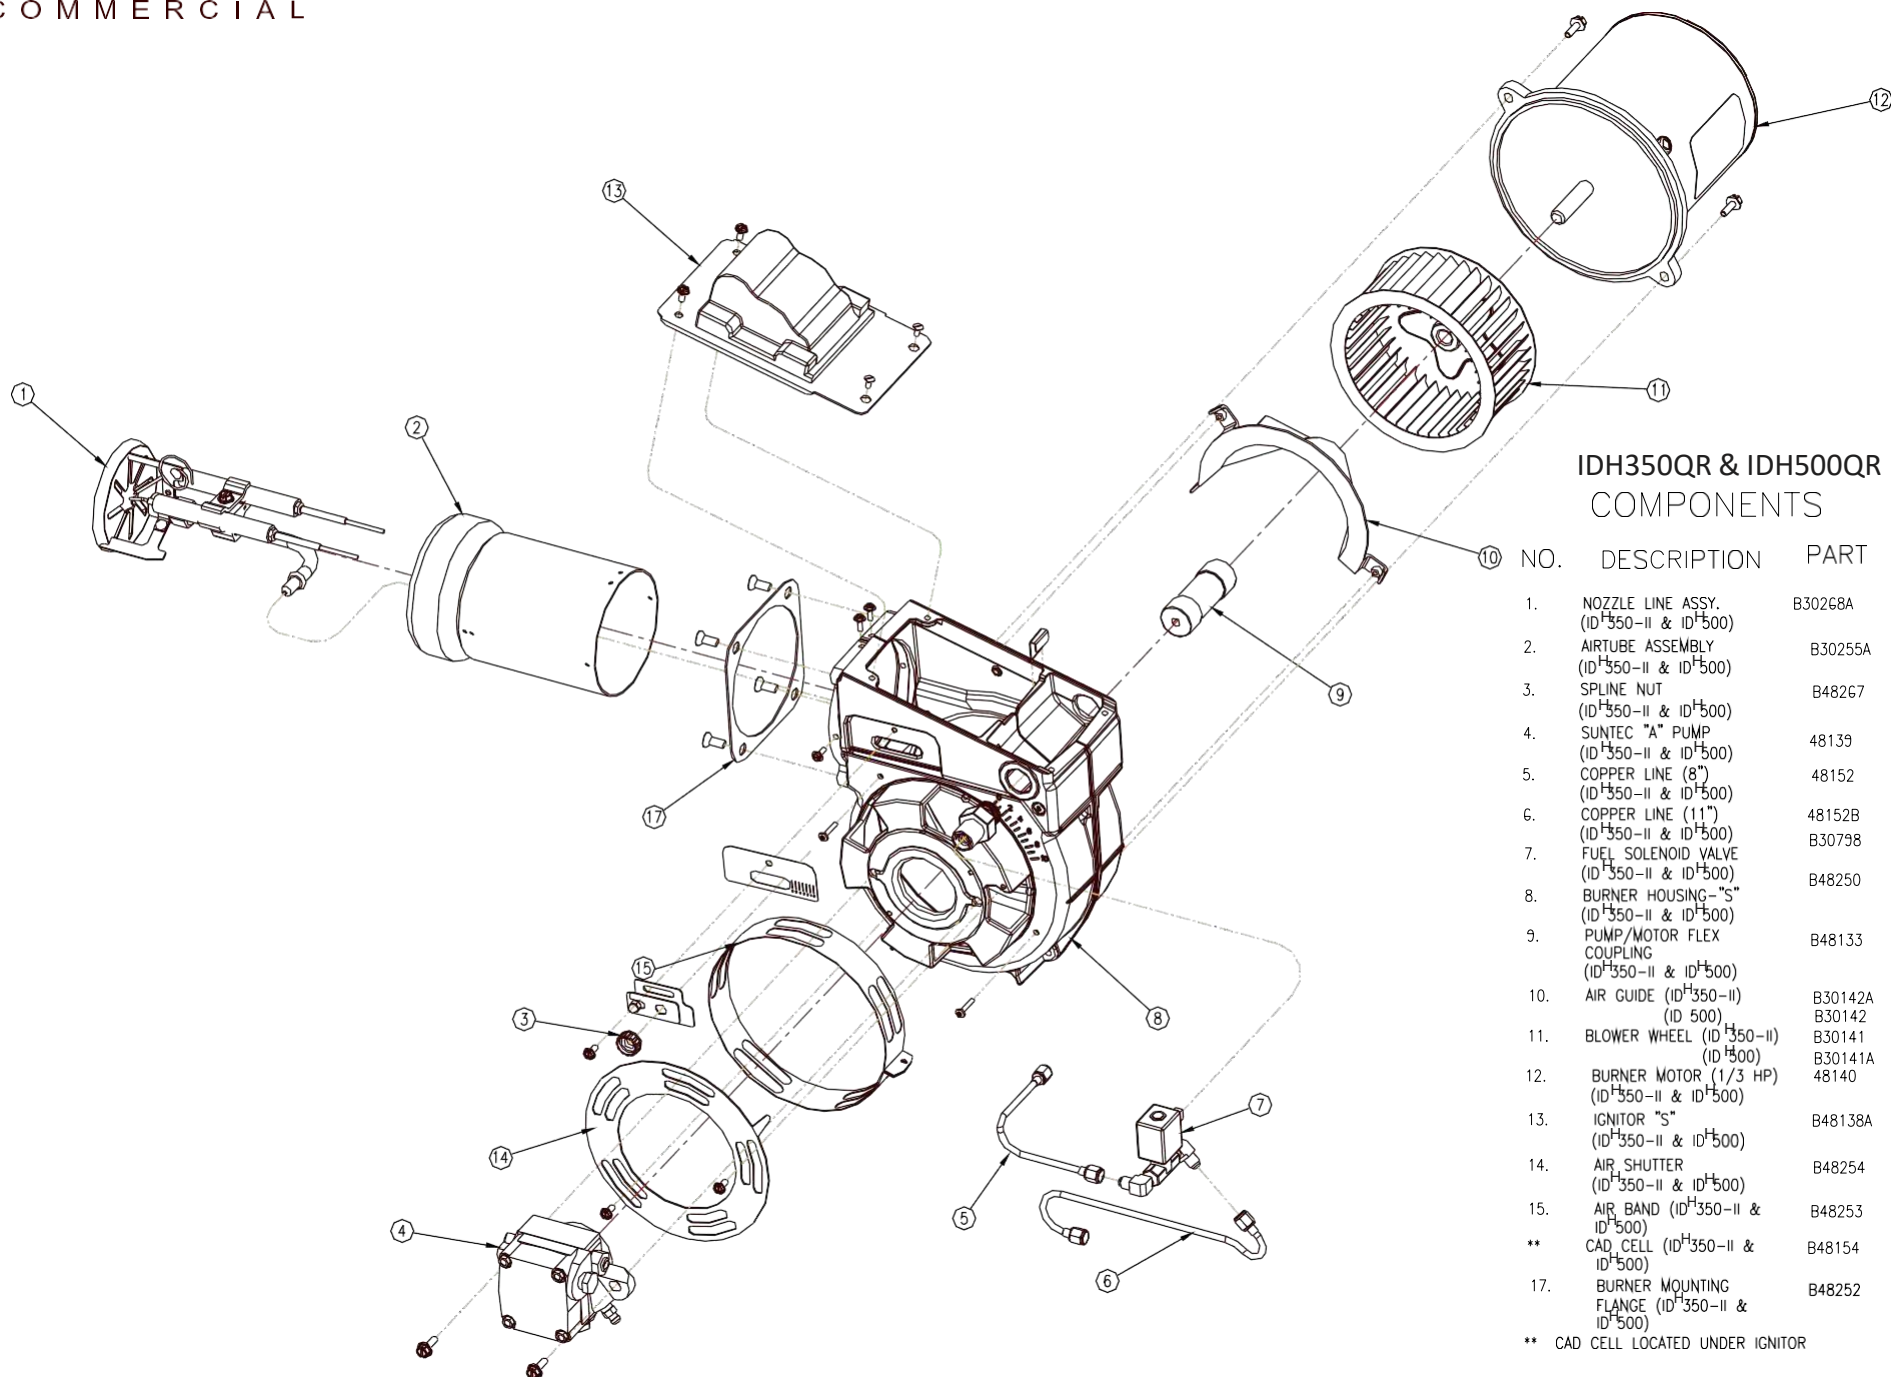

IDH350QR & IDH500QR COMPONENTS

NO.	DESCRIPTION	PART
1.	NOZZLE LINE ASSY. (ID ^H 350-II & ID ^H 500)	B30268A
2.	AIR TUBE ASSEMBLY (ID ^H 350-II & ID ^H 500)	B30255A
3.	SPLINE NUT (ID ^H 350-II & ID ^H 500)	B48267
4.	SUNTEC "A" PUMP (ID ^H 350-II & ID ^H 500)	48139
5.	COPPER LINE (8") (ID ^H 350-II & ID ^H 500)	48152
6.	COPPER LINE (11") (ID ^H 350-II & ID ^H 500)	48152B
7.	FUEL SOLENOID VALVE (ID ^H 350-II & ID ^H 500)	B30798
8.	BURNER HOUSING-"S" (ID ^H 350-II & ID ^H 500)	B48250
9.	PUMP/MOTOR FLEX COUPLING (ID ^H 350-II & ID ^H 500)	B48133
10.	AIR GUIDE (ID ^H 350-II) (ID 500)	B30142A B30142
11.	BLOWER WHEEL (ID ^H 350-II) (ID ^H 500)	B30141 B30141A
12.	BURNER MOTOR (1/3 HP) (ID ^H 350-II & ID ^H 500)	48140
13.	IGNITOR "S" (ID ^H 350-II & ID ^H 500)	B48138A
14.	AIR SHUTTER (ID ^H 350-II & ID ^H 500)	B48254
15.	AIR BAND (ID ^H 350-II & ID ^H 500)	B48253
**	CAD CELL (ID ^H 350-II & ID ^H 500)	B48154
17.	BURNER MOUNTING FLANGE (ID ^H 350-II & ID ^H 500)	B48252

** CAD CELL LOCATED UNDER IGNITOR

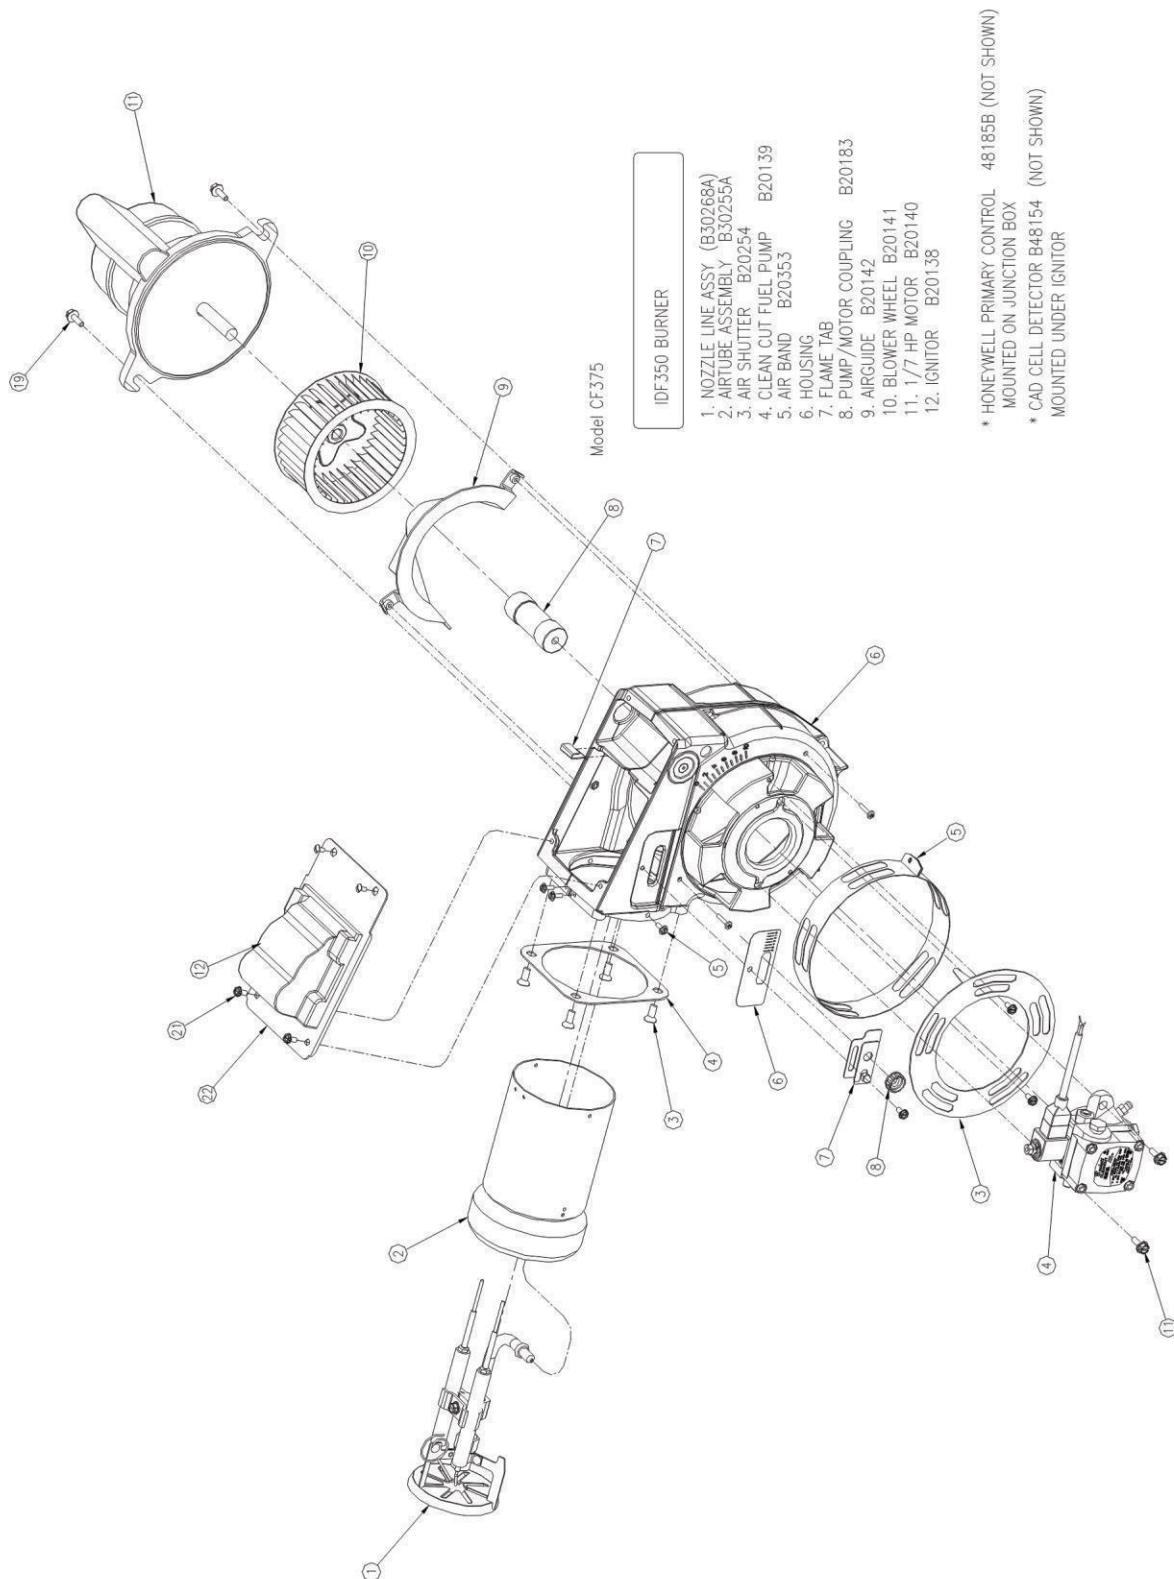

48011 Tigerloop Single Line Remote w/Filter





FITTINGS SHOWN CONNECTED

Use pipe dope on all NPT fittings

PARTS FOR 48011 TIGERLOOP KIT		
PART #	DESCRIPTION	QTY
48010	Tigerloop de-aerator with filter	1
48012	PRV safety valve (PRV38)	1
48013	Low temperature fuel hose assy. x 25 ft.	1
48015	3-way ball valve 3/8"	1
48017	Replacement spin-on filter (Not Included)	1
48134A	3/8" SAE cap	2
48134B	1/2" SAE cap	2
881001	ISO B coupler 1/2" x 1/2" FPT	1
881002	ISO B nipple 1/2" x 1/2" FPT	1
801850A	1/4 MPT x 3/8" M SAE 90°	2
801850D	3/8 MPT x 1/2" M SAE	1
801850E	3/8" MPT x 1/2" M SAE 90°	1
801850F	3/8" MPT x 3/8" M SAE	1
801850G	1/2" MPT x 3/8" MPT steel hex nipple	1
801850H	1/2" MPT steel hex nipple	1
801850I	3/8" MPT x 1/4" MPT steel hex nipple	1
801850L	3/8" NPT steel 90° street elbow	1

REV. 2.3.0 Jul. 2023

SAFETY OIL SUPPLY SYSTEM FOR FUEL CELL

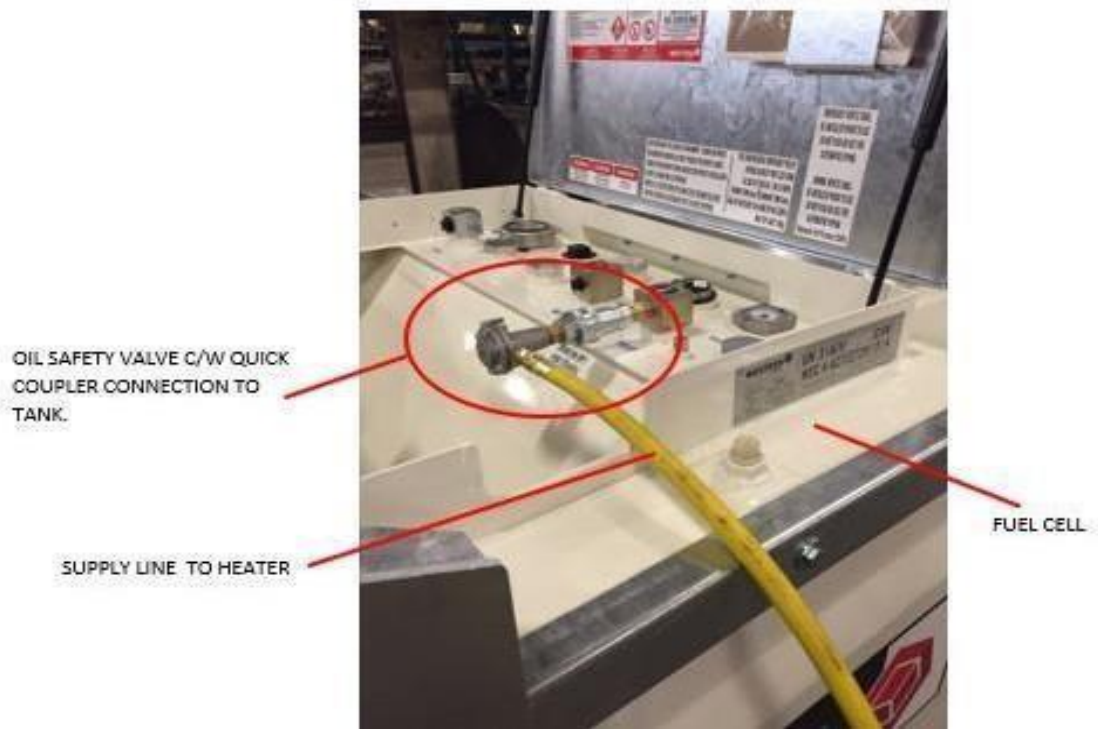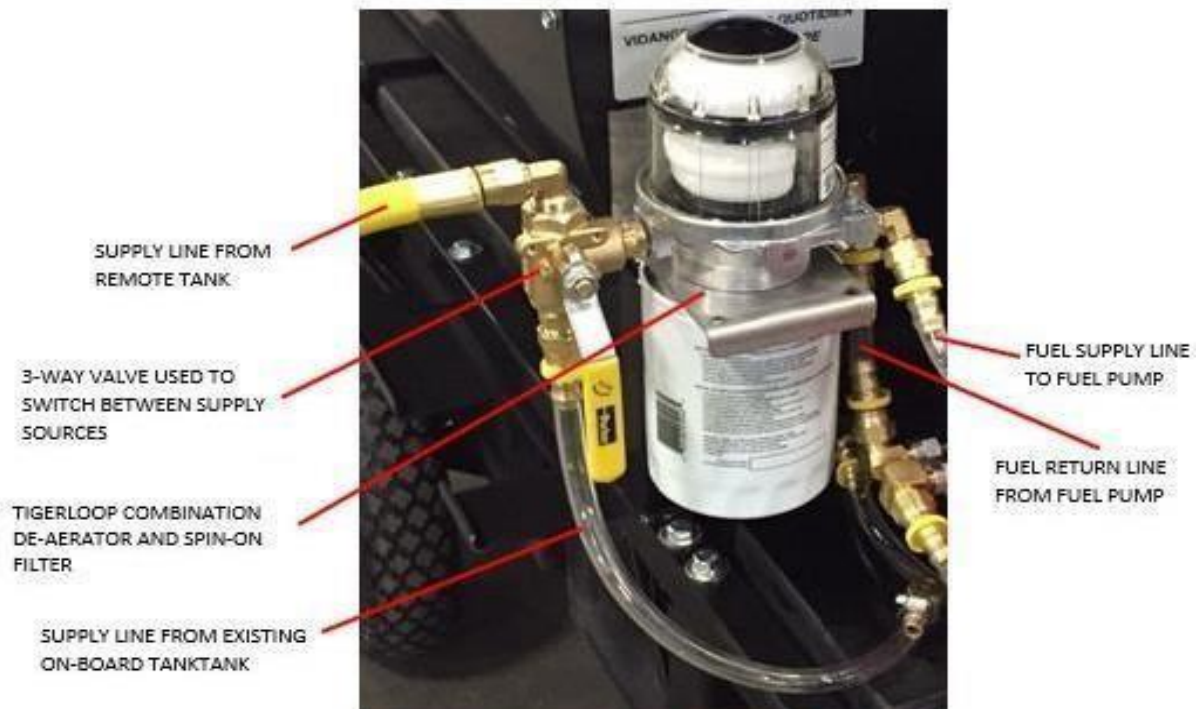

HEAT EXCHANGER FOR OIL UNITS

P/N 50200-ALL IDH 350/500

FLUE COLLAR ASSEMBLY
P/N 50113-ALL UNITS

COMBUSTION CHAMBER
ASSEMBLY C/W INNER SHELL

P/N 50207-IDH MODELS


OUTER SHELL
P/N 50206-ALL IDH MODELS

CAP RING
2 PER ASSEMBLY
P/N 50115 ALL IDH MODELS

RETAINER BOLT
W/WASHER
24 PER UNIT
P/N 48116 ALL UNITS

***COMBUSTION CHAMBER ASSEMBLY &
INNER SHELL ALL ONE PIECE**

IDH350QR AND IDH500QR BACK VIEW

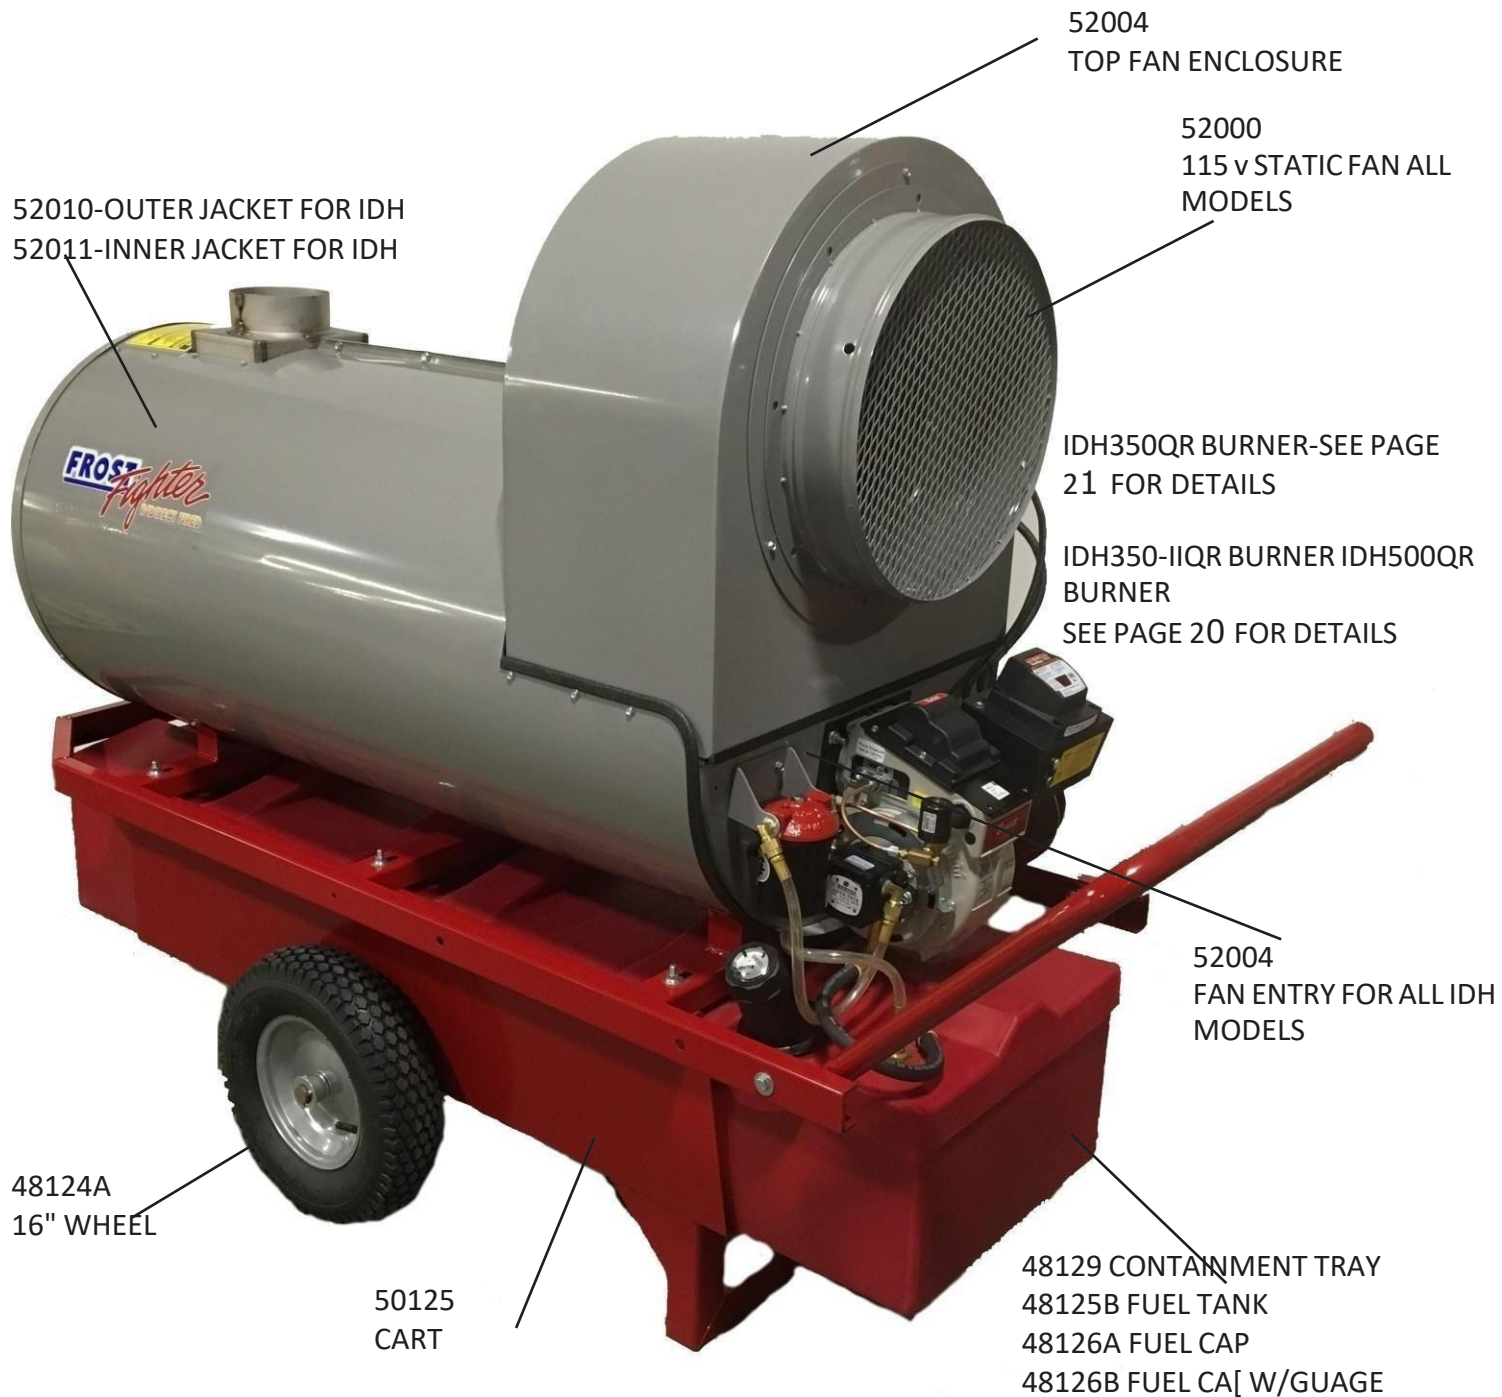

FRONT OF IDH500QR & IDH350QR HEATERS

48119A OUTER COVER PANEL
48119B INNER COVER PANEL

UNDER COVER
48111B ADJUSTABLE FAN SWITCH
48110A HIGH LIMIT SWITCH

UNDER COVER
100 μ F
CAPACITOR



FROSTFIGHTER WARRANTY

Frost Fighter Inc. warrants the Frostfighter heater to be free from defects in a workmanship and materials for a period of twelve (12) months from date of initial service not to exceed fifteen (15) months from date of shipment.

If during the warranty period, the heating elements or fan fail under normal use and service due to a defect in material or workmanship said components will be repaired or replace free of charge F.O.B. the Winnipeg Factory...

All other mechanical and electrical components are covered by a one (1) year limited warranty. Normal maintenance items are excluded under the warranty. The warranty does **NOT** include any freight, labor or sales taxes incurred by the purchaser and is a subject to the following conditions:

1. The heater shall be operated in accordance with the manufacturer's operating and maintenance manual.
2. The heater shall be subject to normal use in service and shall not have been misused, neglected, altered, or otherwise damaged.
3. The unit shall be operated within the rated capacities, at the specified voltage and with the prescribed fuel.
4. The unit has not been allowed to exceed its proper temperature limits due to control malfunction or inadequate air circulation.
5. There is no evidence that the unit has been subject to tampering or deliberate destruction.
6. The heating elements and controls show no sign of overheating, explosion, implosion, or operation in conditions with corrosive or abrasive dusts or gasses.

No representative of Frost Fighter Inc., nor any of its distributors or dealers, is authorized to assume for Frost Fighter Inc. any other obligations or liability in connection with this product, nor alter the terms of the warranty in any way. This warranty is limited to the express provisions contained herein and does not extend to liability for labor costs incurred in replacing defective parts.

Part can be obtained from Frost Fighter Inc., Winnipeg, Manitoba on the basis that credit will be issued if the defective parts returned qualify for replacement pursuant to the terms and conditions of this warranty. Authorization to return any alleged defective parts must be first obtained from the factory prior to transporting the part. A.R.G.A.# must be provided from a Frost Fighter Inc representative. The transportation charges for the alleged defective part must be prepaid by the owner. Frost Fighter Inc. will not accept charges for parts purchased unless the conditions of this warranty have been satisfied and prior authorization to purchase the parts has been received from the factory.



125 FURNITURE PARK WINNIPEG, MANITOBA R2G
1B9, (204) 775-8252